


Critical Wear Areas & Vacuum Test Locations



NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear.


4R75E Valve Body

Click on Sonnax part numbers to see more information.

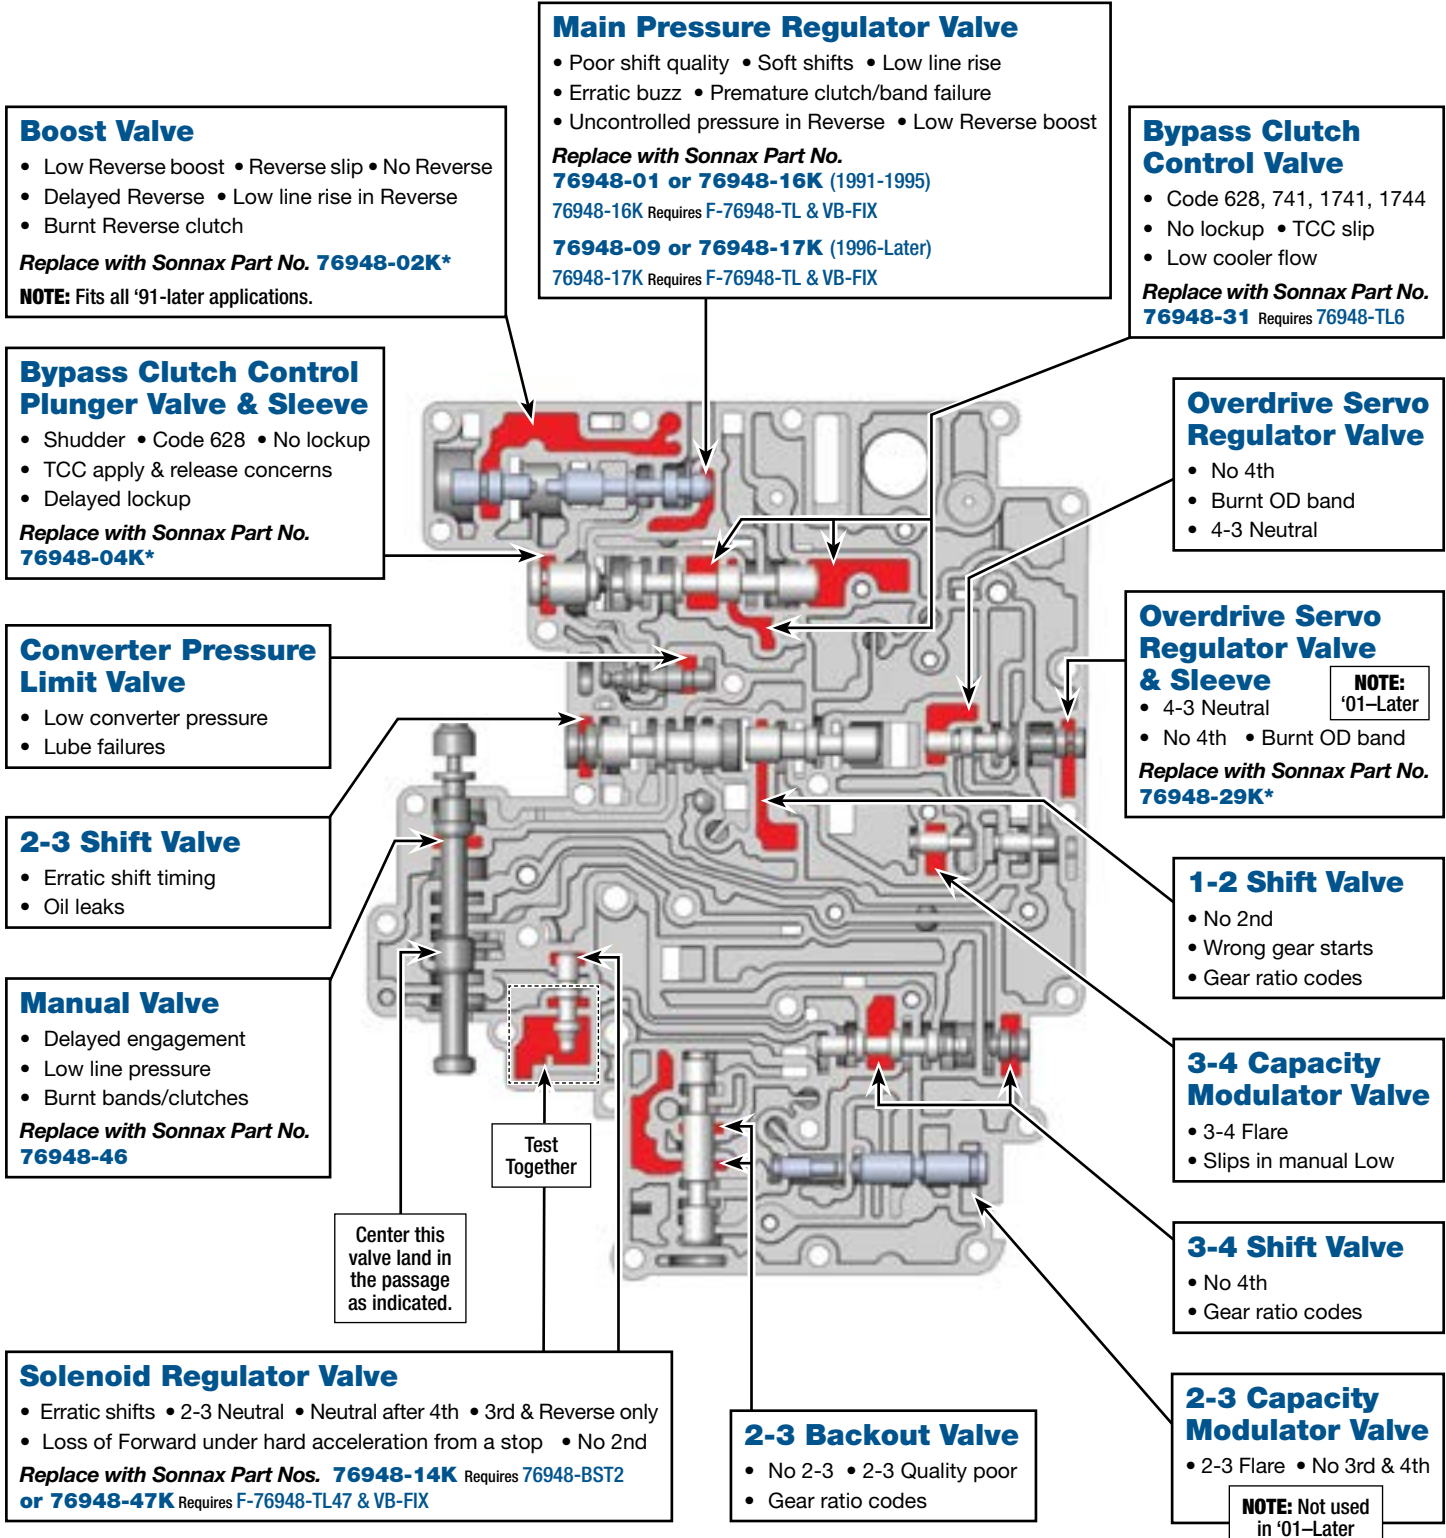

OE Exploded View

4R75E Valve Body

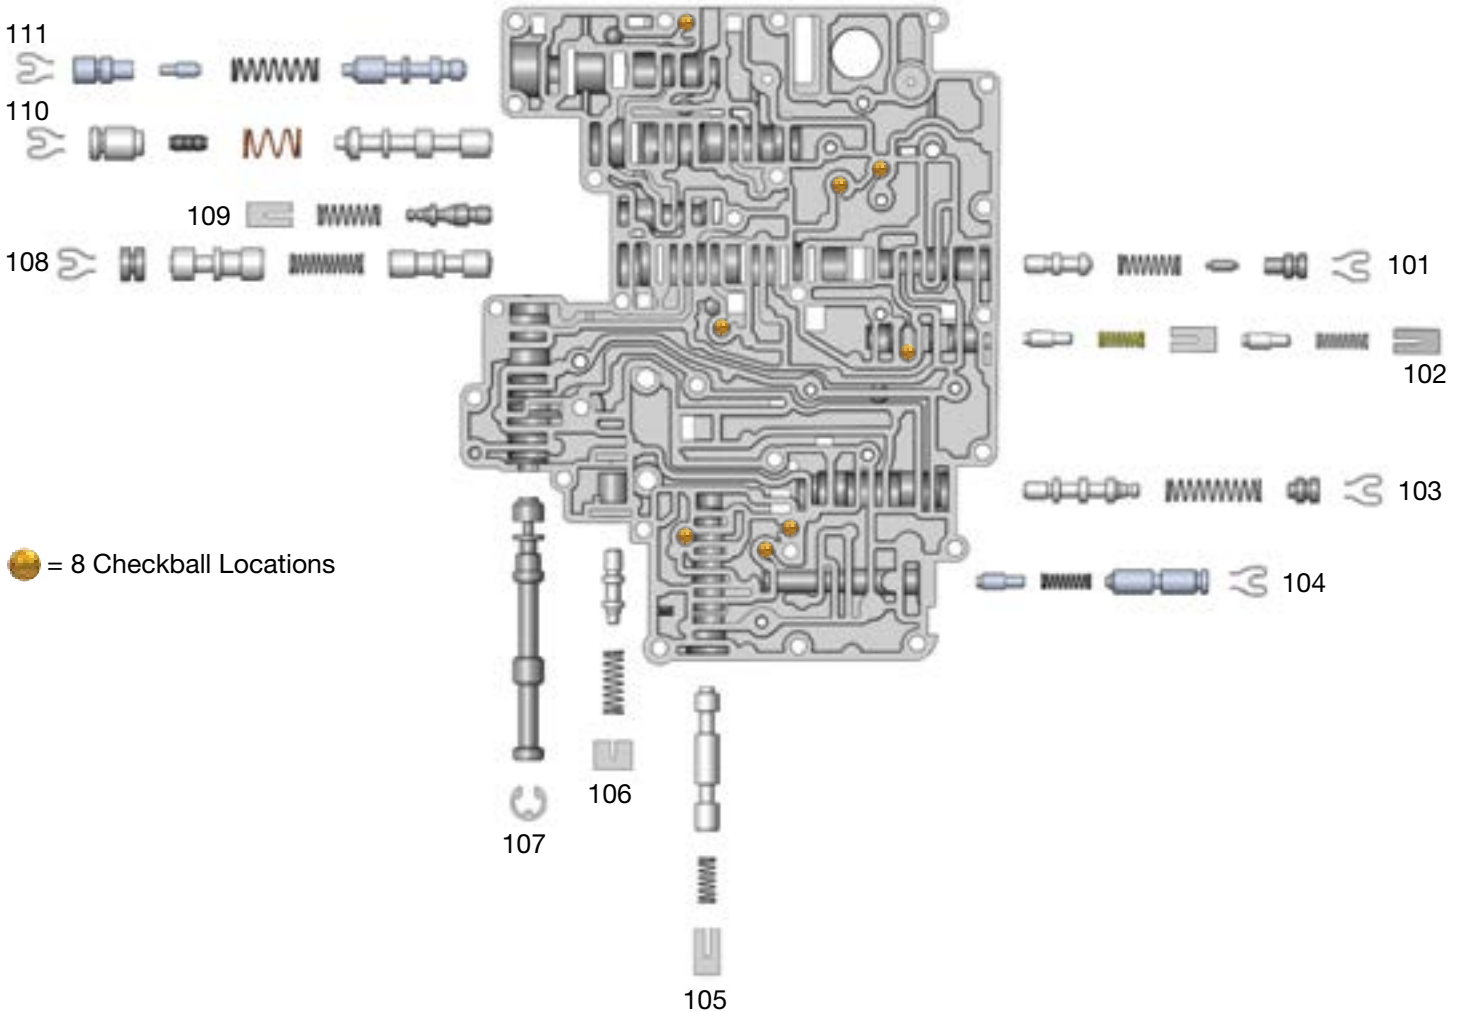

Valve Body Descriptions

I.D. No.	Description
101	Overdrive Servo Regulator Valve (Inboard), Overdrive Servo Regulator Valve & Sleeve (Outboard) '01-Later
102	3-4 Capacity Modulator Valve (Inboard), Low Servo Capacity Modulator Valve (Outboard)
103	3-4 Shift Valve
104	2-3 Capacity Modulator Valve
105	2-3 Backout Valve
106	Solenoid Regulator Valve
107	Manual Valve
108	1-2 Shift Valve (Inboard), 2-3 Shift Valve (Outboard)
109	Converter Pressure Limit Valve
110	Bypass Clutch Control Valve (Inboard), Bypass Clutch Control Plunger Valve & Sleeve (Outboard)
111	Main Pressure Regulator Valve (Inboard), Boost Valve & Sleeve (Outboard)