

TRANSMISSION PARTS


Instructions

Checkball Springs

Part No. 119940-20

• Checkball Springs (10)

NOTE: For use in Phase 2 valve bodies.

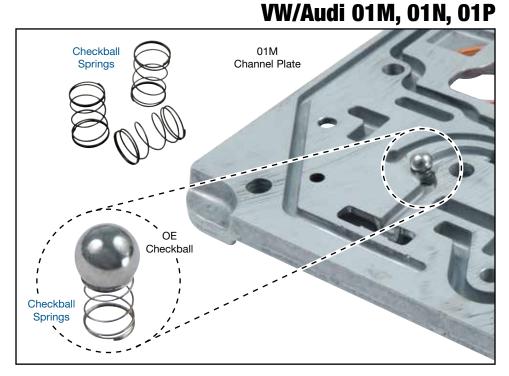

1. Disassembly

Remove and discard OE spring.

2. Installation & Assembly

Install Sonnax spring and OE checkball in indicated pocket.

NOTE: Some Phase 0 and 1 valve bodies (096, 097, 098) also contain this checkball spring. The Sonnax spring may be used in those applications after location and spring specifications are verified. The OE spring should measure .008" wire diameter, .178–.194" outside diameter and approximately .280" long in order to use the Sonnax spring.