


# TRANSMISSION PARTS

## **TCC Control Valve Kit**

### Part No. 122892-06K

- TCC Control Valve
- Spring
- Plunger Valve
- Plunger Sleeve
- Orifice Plug .062", Not Shown

**NOTE:** Also fits Jatco FP series; Ford JF506E, FPH; Jaguar JF506E, FPD; Mazda JA5A-EL FPF1/FPF2; Rover JF506E, FPO; and Nissan ZY units.

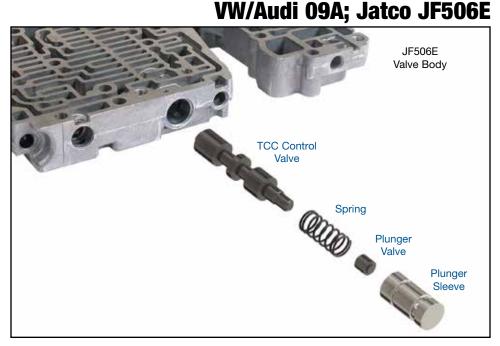

#### 1. Disassembly

- a. Remove OE TCC plunger valve train from valve body bore.
- b. Save OE retainer pin for reuse and discard all other components.

#### 2. Installation & Assembly

- a. Be certain all debris has been removed from the valve bore and valve body.
- b. Place Sonnax spring over TCC control valve spring stem and insert into valve body bore with spring end outboard.
- c. Push Sonnax plunger valve and sleeve assembly into bore, open end first, ensuring Sonnax spring slips into plunger sleeve bore.
- d. Push Sonnax plunger valve assembly in far enough to reinstall OE retaining pin.
- e. Peen Sonnax orifice plug into the controlled exhaust release oil orifice in OE separator plate. Ensure that the plug is secure (**Figure 1**).

#### 3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg (**Figure 2**).

