

## CHRYSLER 42RE, 42RH, 46RE, 46RH, 47RE, 47RH, 48RE, A727, A904

### Accumulator Piston Kit

#### Part No.


**22841-04K**

• Piston	
• D-Ring	Rubber, Large
• D-Ring	Rubber, Small
• Scarf-Cut Seal	PTFE, Large
• Scarf-Cut Seal	PTFE, Small

#### Also Available

#### Replacement Seal Kit

**22841-04SK**

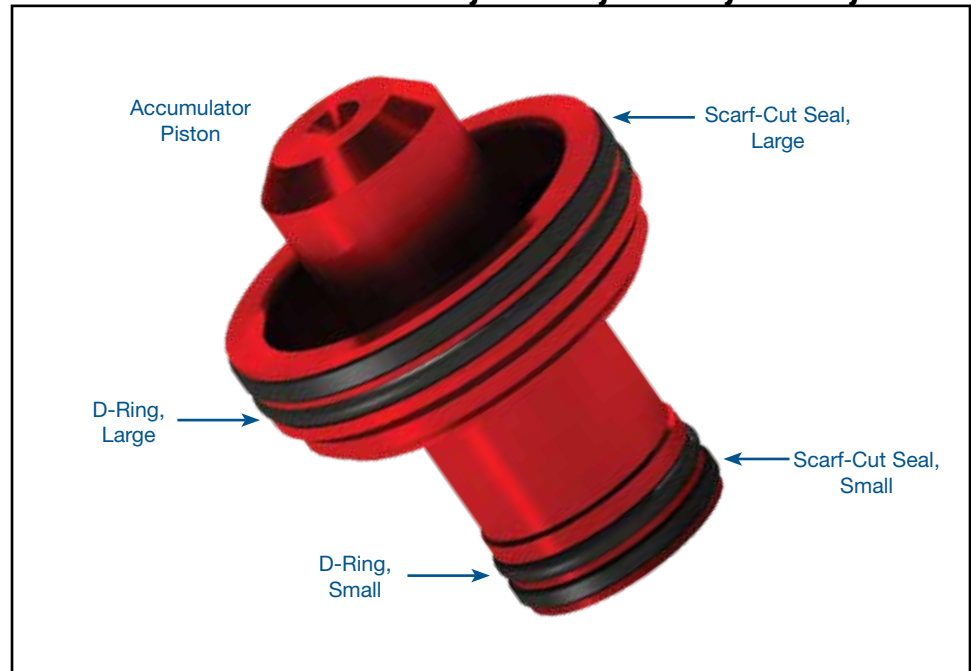

#### 1. Disassembly

- Remove and discard OE piston.
- Clean and inspect the bore.

#### 2. Assembly & Installation

- Install Sonnax PTFE seals and D-rings on piston as shown.
- Lubricate seals.



**NOTE:** If two OE springs were equipped, both springs should be reinstalled with Sonnax piston. In some applications the narrow-diameter OE spring may not fit and/or the large diameter spring may not protrude above the top of Sonnax piston. In either case, it will be necessary to source a spring(s) from a 46-47-48RH/RE unit.

- Install Sonnax piston.