TRANSMISSION PARTS

Instructions

# **Oversized Safety Valve**




Part No. 33741B-01

### **Tool Kit**

## Part No. F.33741B-TL1

- Reamer
- Reamer Jig
- Guide Pin

**NOTE:** Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX, a self-aligning valve body reaming fixture. More information and instructions can be found online at www.sonnax.com.

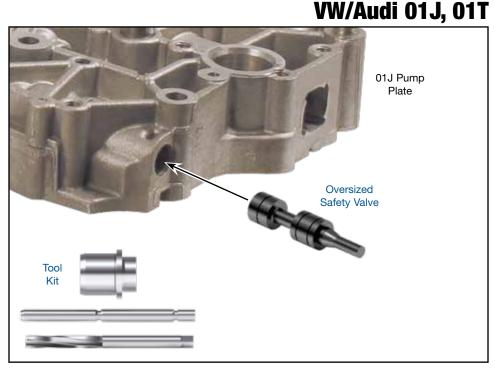

#### 1. Disassembly

- a. Remove OE retainer and spring. Save for reuse.
- b. Remove and discard OE valve.

#### 2. Bore Reaming

Ream safety valve bore (for reaming instructions/ reamer care, please visit www.sonnax.com). Sonnax reaming tool kit **F-33741B-TL1** and **VB-FIX** are required for this operation.

#### 3. Installation & Assembly

- a. Ensure valve bore and valve body is cleaned and clear of all debris.
- b. Install Sonnax valve.
- c. Reinstall OE spring and secure with OE retainer.

#### 4. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 20 in-Hg.

