Instructions

Oversized TCC Regulator Valve Kit

Part No.

34994-18K

- Valve
- Sleeve
- Retaining Pin

Spring Short, SelectiveSpring Long, Selective

Tool Kit


Part No. F-34994-TL18

- Reamer
- Reamer Jig
- Guide Pin

Figure 1

Sonnax Spring Selection	
OE Shift Feel	Firmer Lockup*
Approximately 1.23" Free Length Short Spring	Approximately 1.50" Free Length Long Spring
auuuu	auuuu
* Long spring best suited for towing applications	

GM 4L80-E, 4L85-E

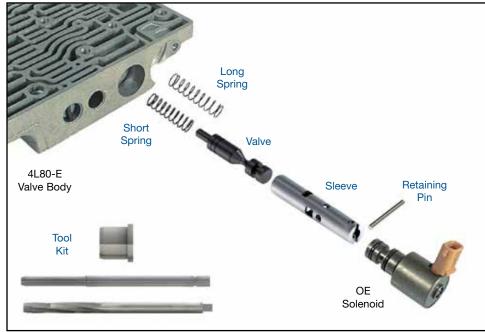

1. Disassembly

- a. Remove solenoid and set aside for reuse.
- b. Remove and discard OE retaining pin.
- c. Remove and discard OE TCC regulator valve and spring.

2. Reaming

Ream TCC regulator bore (for reaming instructions/reamer care, please visit www.sonnax.com). Sonnax reaming tool kit **F-34994-TL18** and **VB-FIX** are required for this operation.

3. Installation & Assembly

- a. Be certain all debris has been removed from the valve bore and valve body.
- b. Place selected Sonnax spring (**Figure 1**) over long stem on Sonnax TCC valve.
- c. Insert valve/spring assembly into Sonnax sleeve, oriented as shown in main picture.
- d. Install spring/valve/sleeve assembly into bore, spring-end first.
- e. Secure valve train with Sonnax retaining pin.
- f. Reinstall or replace and secure OE solenoid.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg (**Figure 2**).

