


## Stator Bushing

Part No.

**46000-01K**

Stator Bushings (2)

### Ford 4F27E, FNR5; Mazda FN4A-EL, FS5A-EL

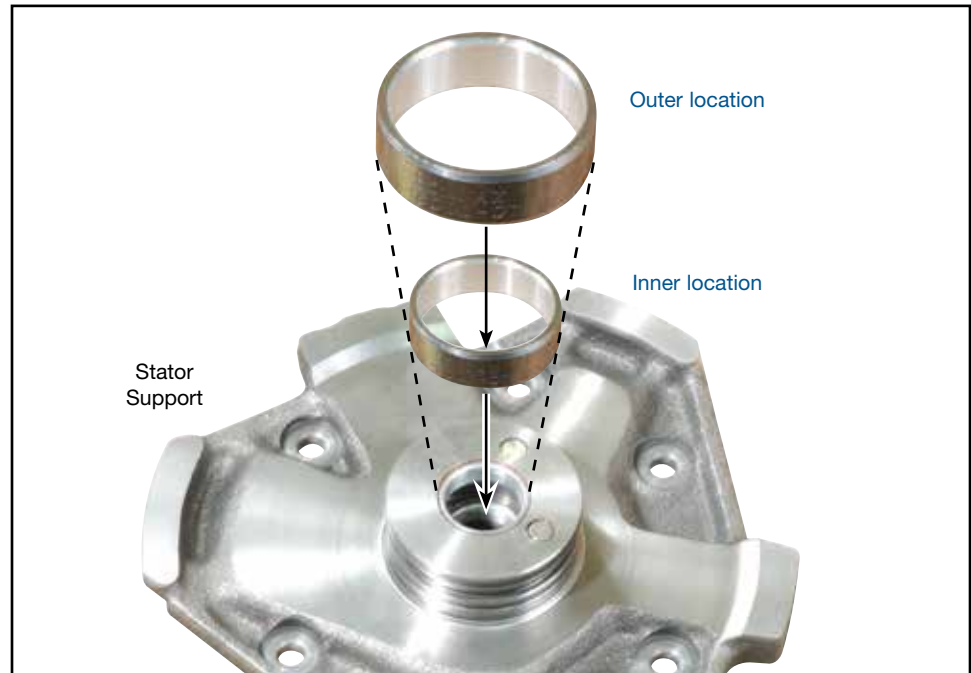

#### 1. Disassembly

- Note OE bushing depth.
- Remove worn bushings from pump stator.

#### 2. Installation & Assembly

- Install bushings, starting with inner bushing first (**Figure 1**).
- Depth of bushing should be approximately .015" below chamfer of bore.

