

### Instructions

# Ford A4LD


## O-Ringed End Plug Kit

Part No.	
56947-14K	
• End Plugs, Small (2)	
• O-Rings, Small (3)	1 Extra
• End Plug, Medium	

1 Extra

1 Extra

- O-Rings, Medium (2)
- End Plugs, Large (3)
- O-Rings, Large (4)

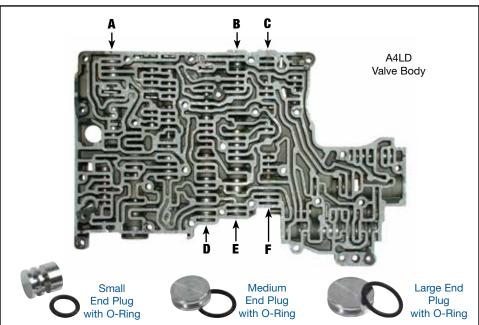

### 1. Disassembly

- a. Remove OE retaining clips and save for reuse.
- b. Remove end plugs from the valve body and discard.

### 2. Installation & Assembly

- a. Lubricate Sonnax O-rings with Transgel®, then install O-rings into the outer groove of Sonnax end plugs.
- b. Roll end plug on a clean, flat surface to compress O-ring into end groove.
- c. Insert O-ringed end plugs into appropriate valve bores (**chart**) until aligned with retaining clip opening.

NOTE: Small end plug must go into bore O-ring end first.

d. Install OE retaining clips to seat the end plugs.

Valve Bore Location		Small End Plug	Medium End Plug	Large End Plug
A	Intermediate Servo Accumulator Valve		$\checkmark$	
В	Throttle Pressure Boost Valve	✓		
C	1-2 Transition Plug	✓		
D	2-3 Shift Valve			✓
E	1-2 Shift Valve			$\checkmark$
F	Governor Coast Boost Valve			$\checkmark$

©2020 Sonnax Transmission Company, Inc. • A Marmon / Berkshire Hathaway Company