


TRANSMISSION PARTS

Instructions

Forward Engagement Control Springs

Part No. 56947J-S6

Springs (5)

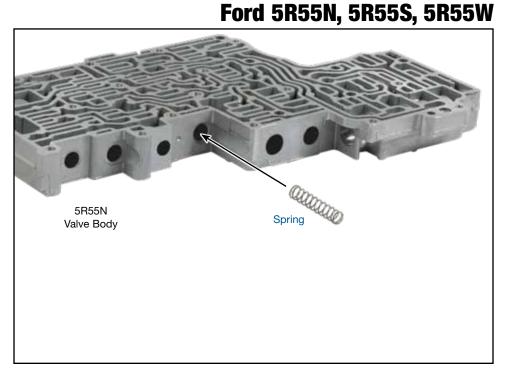

1. Disassembly

- a. Remove OE valve train parts.
- b. Discard OE Forward engagement control spring and keep all other parts for reuse.

2. Installation & Assembly

Reinstall OE valve train parts, replacing Forward engagement control spring and secure with retaining clip.