

Aisin AW 55-50SN, 55-51SN

B5 Control Spring


Part No.

59947-33

• B5 Control Spring Bag/5

NOTE: Also fits AF-23/33 and RE5F22A.

Only some '05-later units were equipped with a control spring in the B5 clutch control valve lineup.

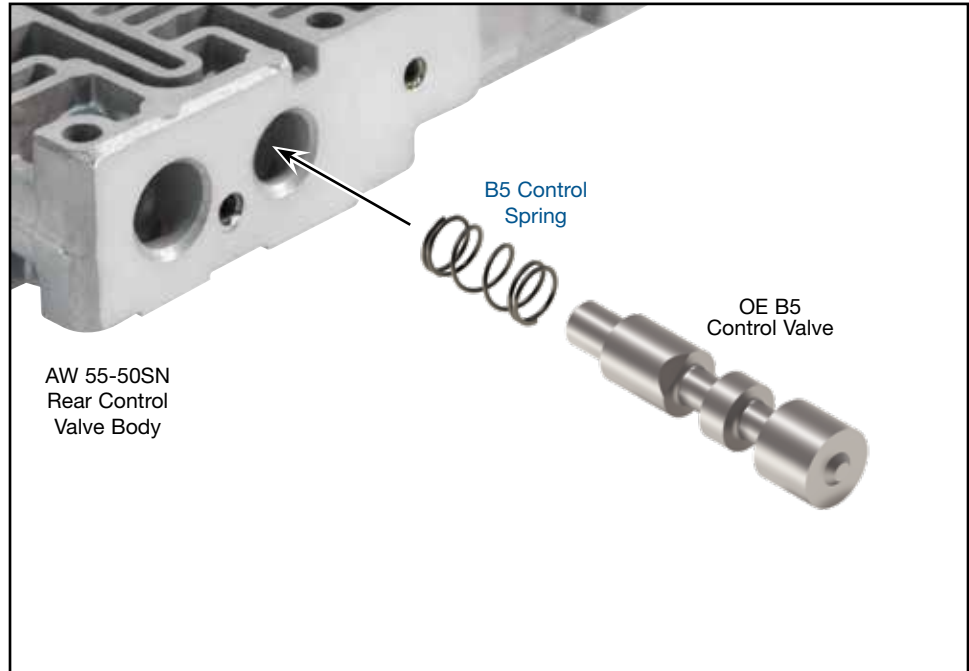

1. Disassembly

Remove OE retaining cover, gasket and B5 control valve; save all for reuse.

2. Installation & Assembly

- a. Be certain all debris has been removed from the valve bore and valve body.
- b. Install Sonnax B5 control spring.
- c. Reinstall OE B5 control valve, followed by the gasket and retaining cover.