

Accumulator Shift Valve Kit


Part No.

63940-03K

- Valve
- Spring
- O-Ring

NOTE: Replaces early or late OE lineups in most valve bodies. Some late valve bodies do not have an accumulator shift valve.

Ford 4F20E; Jatco/Nissan RE4F04A

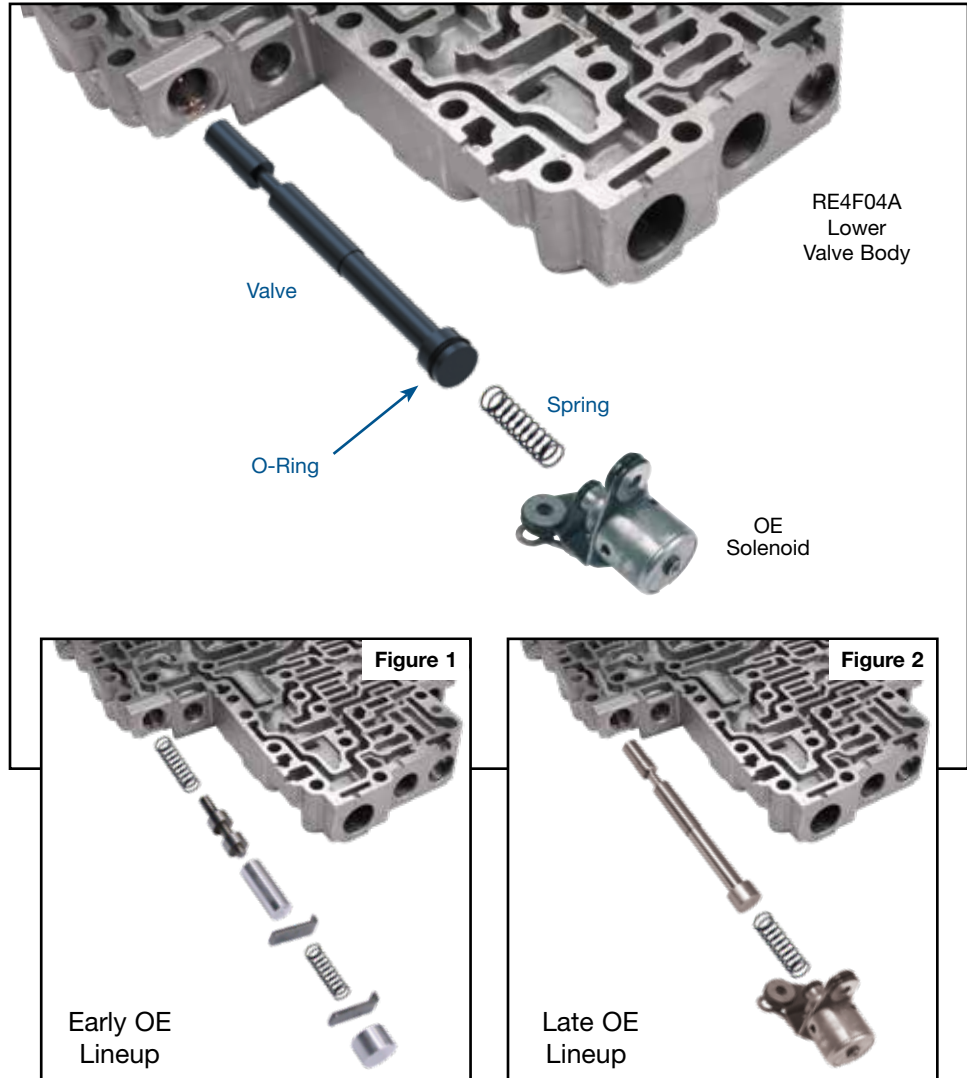

1. Disassembly

- Remove all components from the valve body bore (Figures 1 & 2).
- Save the solenoid for reuse and discard all other components.

2. Installation & Assembly

- Insert Sonnax O-ring into the groove of Sonnax valve, lubricate with assembly gel.
- Insert the O-ringed valve into the bore until it bottoms.
- Install Sonnax spring.
- Reinstall OE solenoid.