Instructions

GM 4T80-E

AFL Valve Kit


Part No. 72854-01K

- Sleeve
- Valve
- Regulating Spring
- Retaining Spring
- Sleeve Retaining Clip

Tool

Part No. 72854-TI

- Reamer
- Reamer Jig

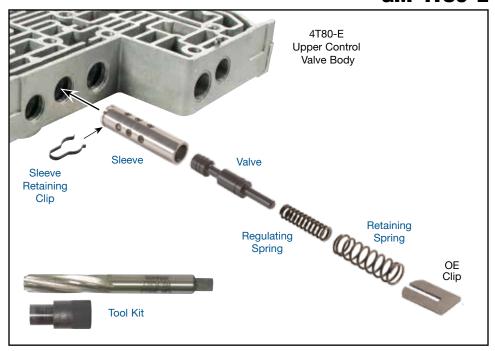

1. Disassembly

- a. Remove all components from the bore.
- b. Keep OE valve body clip for reuse and discard the rest.

2. Bore Reaming

Ream AFL bore (for reaming instructions/ reamer care, please visit www.sonnax.com). Sonnax reaming tool kit **72854-TL** is required for this operation.

3. Installation & Assembly

- a. Be certain all debris has been removed from the valve bore and valve body.
- b. Insert Sonnax valve into Sonnax sleeve and install the assembly into the bore, with the grooved and notched end of the sleeve inboard, until sleeve bottoms in bore.

NOTE: A 7/16" drill shank can be used to help.

- c. Secure with Sonnax sleeve retaining clip inserted into the sleeve groove at the balance AFL port.
- d. Insert Sonnax regulating spring into the bore and over Sonnax valve stem.

- e. Insert Sonnax retaining spring into the bore and over Sonnax regulating spring, flush with the outboard end of the sleeve.
- f. Reinstall OE valve body clip.

NOTE: A flat-head screwdriver can be used to compress the springs.



NOTE: Ensure the two Sonnax springs are not contacting each other, or coil binding could occure during application.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

