

Boost Valve Kit

Part No.

74846-01K


- Valve
- Sleeve



NOTE: No TV Cable, electronic transmission, factory style sleeve, no O-rings.

WARNING: The applications listed above are meant as a guide only. Be sure to measure original valve and compare dimensions before purchasing.

Mazda F4A-EL, F4EAT, GF4A-EL

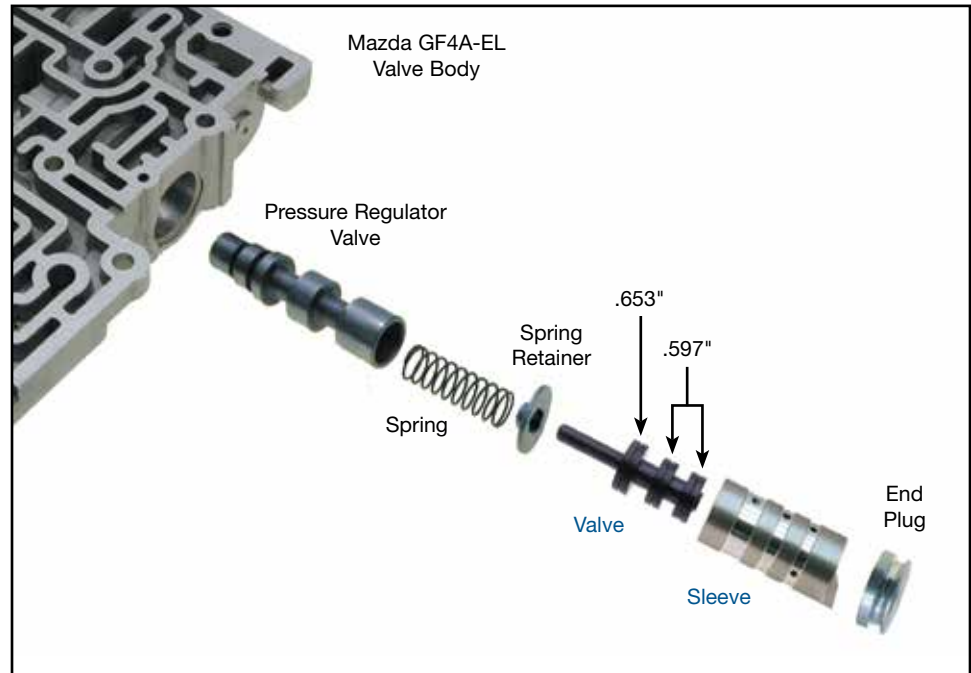

1. Disassembly

- Remove all OE parts in the pressure regulator bore.
- Discard OE boost valve and sleeve, keeping all other parts for reuse.

2. Installation & Assembly

- Be certain all debris has been removed from the valve bore and valve body.
- Reinstall OE pressure regulator valve, spring and spring retainer into bore.
- Install Sonnax boost valve and sleeve followed by OE end plug.
- Secure lineup with OE retaining pin (*not shown*) by selecting the correct retaining pin groove for the unit being repaired. The inner groove is used for the F4A-EL or F4EAT. The outer groove is used for the GF4A-EL.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

