TRANSMISSION PARTS

Instructions


# **Main Pressure Regulator Valve**

Part No.

76948-09

NOTE: Fits '96-later units.

# Ford 4R70E, 4R70W, 4R75E, 4R75W, AODE

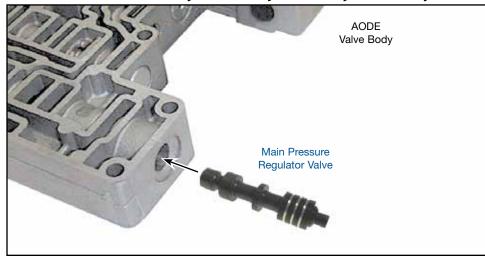


## 1. Identify Valve Body


Identify early vs. late valve body (Figures 1 & 2).

## 2. Disassembly

 a. Remove OE retainer, boost assembly and spring. Set aside for reuse.




 b. Remove and discard OE pressure regulator valve.






#### '95-Earlier Valve Body = No Casting Notches

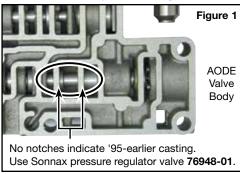

#### 96-Later Valve Body = Casting Notches Present

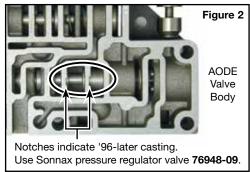



# TRANSMISSION PARTS

MAIN PRESSURE REGULATOR VALVE 76948-09

Instructions

### 3. Installation & Assembly

- a. Ensure valve bore and body are clean and clear of debris.
- b. Lubricate and install Sonnax valve.
- c. Reinstall OE spring.
- d. Reinstall or replace OE boost assembly. If OE boost assembly had a small spring, reinstall spring.
- e. Secure with OE retainer.

## 4. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg (Figure 3).

