


Pump Spring Spacer

Part No.

77917-RV

- Spacers (10)

GM 200-4R, 4L60, 4L60-E, 4L65-E, 4L70-E

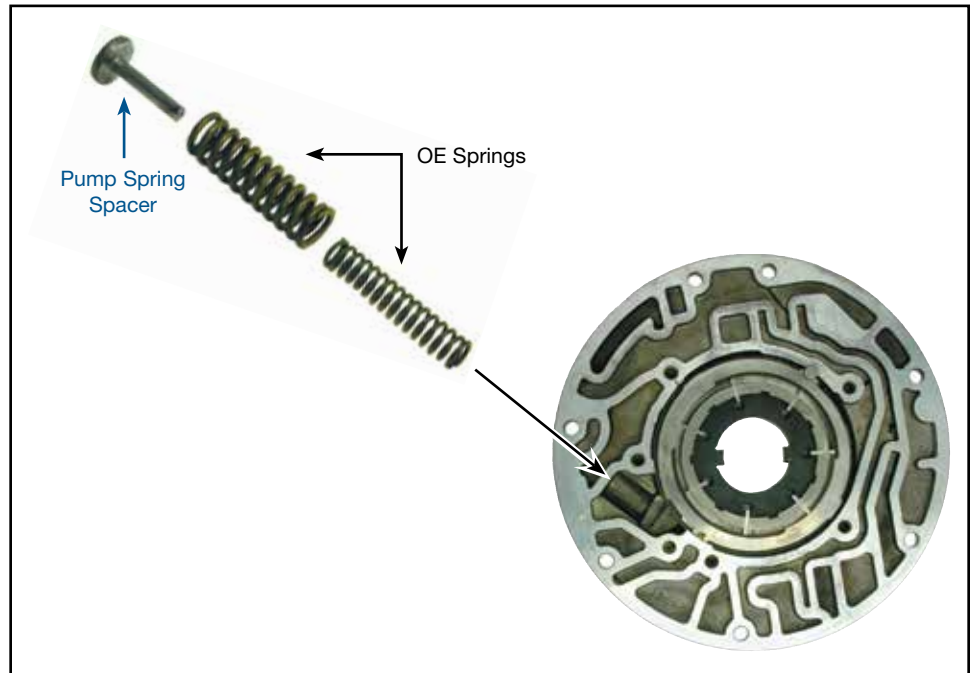

To install the Sonnax pump spring spacer, place the two OE springs over the spacer stem and reinsert into the pump cavity with the large spacer diameter seated against the pump wall. Refer to the picture above for proper arrangement.