Instructions

TCC Solenoid Snout Kit

Part No. 77942-02K

• TCC Solenoid Snout with Anti-Drainback Valve

• O-Ring

NOTE: Fits '97-later PWM units.



1. Disassembly

- a. Remove plastic OE solenoid snout by unbending the four bracket tabs that secure it.
- b. Discard plastic snout and keep OE steel plunger valve for reuse.

2. Installation & Assembly

- a. Install Sonnax O-ring in groove of Sonnax TCC solenoid snout.
- b. Place Sonnax solenoid snout on OE solenoid base and bend the four bracket tabs back into place to secure.
- c. Remove OE plastic drainback valve from pump.
- d. Install Sonnax orificed cup, by pressing the cup plug into the pump and staking it in place.

