


Instructions

GM 4L60

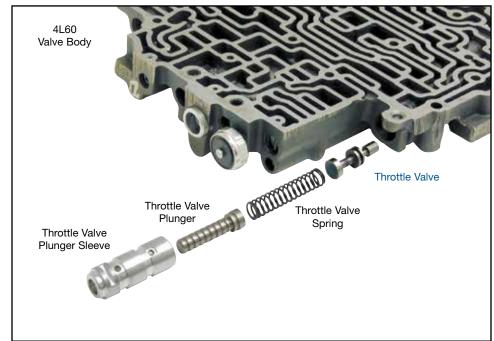

1. Disassembly


- a. Remove the two spring pins from the valve body and set aside for reuse.
- b. Remove OE throttle valve plunger sleeve, plunger and spring, setting aside for reuse.
- c. Remove and discard OE throttle valve.

2. Installation & Assembly

- a. Install Sonnax throttle valve.
- b. Reinstall OE throttle valve spring, throttle valve plunger sleeve and valve.
- c. Reinstall the two OE spring pins to the valve body.

4. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

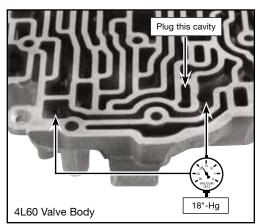

Throttle Valve



NOTE: Fits both aluminum sleeved and non-sleeved units.