

Instructions

ZF5HP19

Oversized Pressure Regulator Valve

Part No. 85755-02


NOTE: Fits late (E18.2) valve body (Figure 1).




Part No. F-85755-TL2

- Reamer
- Reamer Jig
- Guide Pin

NOTE: Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX, a self-aligning valve body reaming fixture. More information and instructions can be found online at www.sonnax.com.

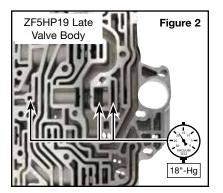

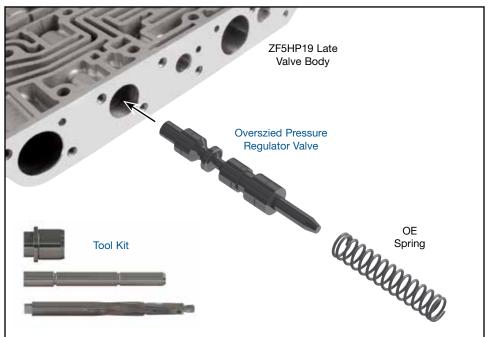

1. Disassembly

- a. Remove the valve body casting end plate.
- b. Remove OE spring and save for reuse.
- c. Remove OE valve and discard.

2. Bore Reaming


Ream pressure regulator bore (for reaming instructions/reamer care, please visit www.sonnax.com). Sonnax reaming tool kit **F-85755-TL2** and **VB-FIX** are required for this operation.

3. Installation & Assembly

- a. Be certain all debris has been removed from the valve bore and valve body.
- b. Install Sonnax valve.
- c. Install OE spring.
- d. Reattach OE valve body casting end plate.

4. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg (**Figure 2**).

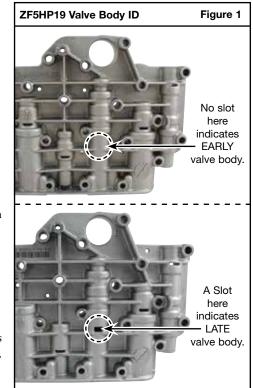

©2020 Sonnax Transmission Company, Inc. • A Marmon/Berkshire Hathaway Company

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com