Instructions

Oversized Lockup Control Valve Kit

Part No. 98892-17K

- Valve
- Sleeve
- End Plug

NOTE: This kit fits various Honda/Acura 4-speed models. However, model to model, the appearance of valve bodies and the location of the lockup control valve may vary. See Honda 98892-17K Application Chart for a detailed guide.


Tool Kit

Part No.

• Reamer


- Reamer Jig
- Guide Pin

NOTE: Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX, a self-aligning valve body reaming fixture. More information and instructions can be found online at www.sonnax.com.

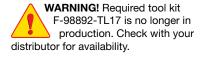

Honda/Acura 4-Speed 98892-17K Application Chart				
Make	Model	Ye From	ear To	Trans. Code
Acura	3.0CL	1996	2000	M7ZA
Acura	3.0CL	1997	2000	B7ZA
Acura	3.2TL	1999	1999	B7VA
Honda	Accord	1998	2002	В7ХА
Honda	Odyssey	1999	2001	B7TA
Honda	Odyssey	1999	2001	B7YA

Honda/Acura 4 Speed, 3-Shaft

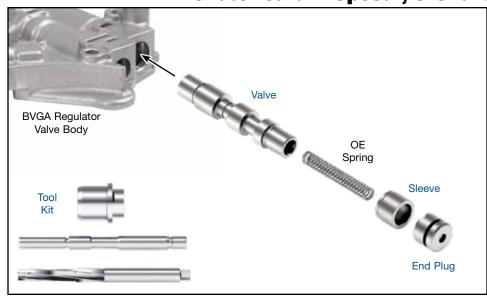

1. Disassembly

- a. Remove OE lockup control valve train from valve body.
- b. Discard OE valve, sleeve and end plug. Save retainer clip and spring for reuse.

2. Bore Reaming

Ream lockup control bore (for reaming instructions/reamer care, please visit www.sonnax.com). Sonnax reaming tool kit **F-98892-TL17** and **VB-FIX** are required for this operation.

3. Installation & Assembly

- a. Ensure all debris has been removed from valve bore and valve body.
- b. Insert Sonnax valve with the spring pocket outboard.
- c. Insert Sonnax sleeve with the stepped O.D. end inboard.
- d. Insert OE spring, making sure the spring sits into the valve spring pocket.
- e. Insert Sonnax end plug and secure it in position with the OE retainer clip.

4. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 14 and 18 in-Hg.

