TRANSMISSION PARTS

Instructions

**End Plug** 

# Toyota/Lexus A750E/F, A760E/F/H, A761E, A960E/F, AB60E/F

A761E Lower Valve Body No. 2

FR

# **Oversized Solenoid Modulator Valve Kit**

## Part No. 147741-05K

- Valve
- End Plug



NOTE: Valve kit 147741-05K is no longer in production. Check with distributor for availability.

## **Tool Kit**



## Part No. F-147741-TL5

- Reamer
- Reamer Jig
- Guide Pin

**NOTE:** Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX, a self-aligning valve body reaming fixture. More information and instructions can be found online at www.sonnax.com.

## 1. Disassembly

- a. Remove OE retainer and set aside for reuse.
- b. Remove OE end plug and discard.
- c. Remove OE spring and set aside for reuse.
- d. Remove and discard OE solenoid modulator valve.
- e. Remove shift solenoids and set aside for reuse (Figure 1).



**WARNING:** Damage may occur to valve body if shift solenoids are not removed before securing valve body to **VB-FIX**.

# Remove shift solenoids before reaming. A761E Casting

### 2. Bore Reaming

Ream solenoid modulator bore (for reaming instructions/reamer care, please visit Sonnax.com). Sonnax reaming tool kit **F-147741-TL5** and **VB-FIX** are required for this operation.

## 3. Installation & Assembly

- a. Ensure all debris has been removed from valve bore and body.
- b. Install Sonnax valve, spring guide facing out.
- c. Reinstall OE spring, ensuring spring fits over spring guide on valve.
- d. Install Sonnax end plug.
- e. Reinstall OE retainer.





## TRANSMISSION PARTS

OVERSIZED SOLENOID MODULATOR VALVE KIT 147741-05K, F-147741-TL5

Instructions

## 4. Final Testing

Vacuum testing at the port indicated holds the recommended minimum 18 in-Hg (Figures 2 & 3).



