

## Torque Converter Limit Spring

### Part No.


**44912-02**

Springs (5)

**NOTE:** Fits OE aluminum valves found in early-style units only.



## Chrysler 45RFE, 545RFE, 65RFE, 66RFE, 68RFE

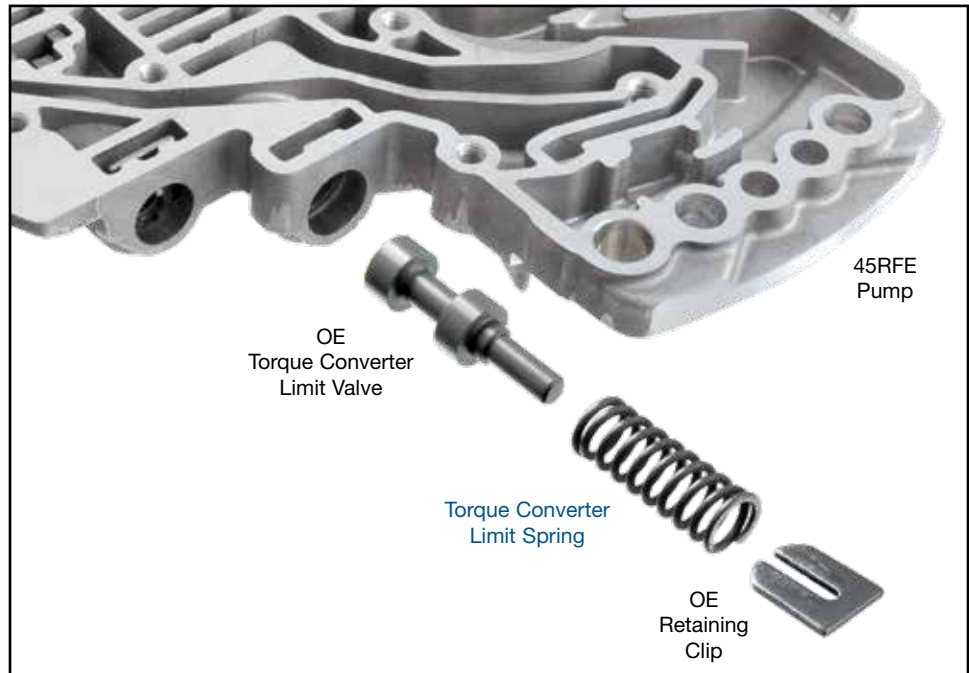

### 1. Disassembly

- Remove OE torque converter limit valve retaining clip, spring and valve.
- Discard spring, while keeping valve and retainer for reuse.
- Ensure all broken spring pieces are removed.

### 2. Installation & Assembly

- Inspect valve and bore for wear or damage from broken spring.
- Insert OE TC limit valve, then install Sonnax spring into TC limit bore.
- Secure with OE retaining clip.