TRANSMISSION PARTS

 
Instructions

Pump Gear Set

Part No.

36438A-03

- Inner Pump Gear
- Outer Pump Gear




NOTE: Direct, drop-in replacement for existing F5 and F8 E4OD pumps (**Figure 1**). Can be used in all 4R100 pumps.

WARNING: E4OD E9 or F1 casting should be replaced with an F5 or F8 casting.

Also Available

Oversized Pump Gear Set 36438AX-01K

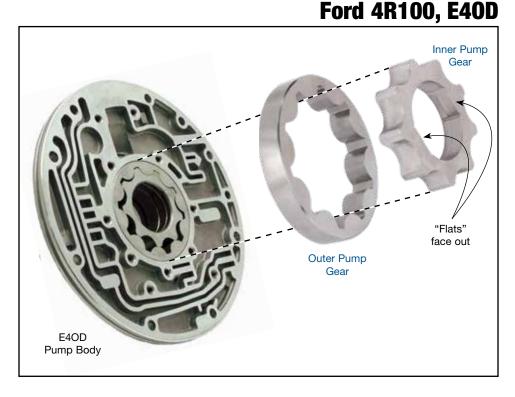

1. Disassembly

- a. Remove worn gears from pump housing.
- b. Clean pump cavity and remove any existing burrs or rough surfaces by hand, using a ScotchBrite™ pad. Do not use an air buffer or other power tool to prepare pump cavity.

2. Installation

Install Sonnax gear set with the flats on inner gear facing outward, toward the control body assembly (main image).

