

Part No.

• O-Ring

Part No.

• Reamer • Reamer Jig

• Guide Pin

NOTE: Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX,

a self-aligning valve body reaming fixture.

More information and instructions can be

found online at www.sonnax.com.

### Instructions

# Allison® 1000/2000/2400

#### **Oversized Gain Valve Kit OE** Trim Valve Spring 37000-24K **OE** Trim Valve • Gain Valves (2) OE Gain OE Trim Valve Spring Valve Spring Gain NOTE: Fits '00-'09 units only. OE Trim Allison® 1000 Valve Valve Body Valve Gain Valve **Tool Kit** O-Ring Guide Pin (Install on OE "A' Reamer Jig Tool Klt bore solenoid Only F-37000-Reamer Reamer Stop • Reamer Stop

NOTE: "A" and "B" trim pressure valve trains are visually similar but are not the same.

### 1. Disassembly

- a. Remove OE solenoid retainer, solenoid, gain valve, gain valve spring (found in "A" bore only), trim valve and trim valve spring.
- b. Discard OE gain valve, while saving all other parts for reuse.
- c. Throughly clean bore prior to reaming.

### 2. Bore Reaming

a. Insert reamer stop tool into bore with small diameter inboard. Ensure reamer stop contacts bottom of bore.



NOTE: The reamer stop tool must be inserted all the way into the bore (small diameter inboard) prior to reaming. Failure to use the reamer stop tool will permit the reamer to over-travel in the bore and will destroy the casting.

b. Ream bore (for reaming instructions/reamer care, please visit www.sonnax.com). Sonnax reaming tool kit F-37000-TL24 and VB-FIX are required for this operation.

### **3. Installation & Assembly**

Be certain all debris has been removed from the valve bores and valve body.

### "A" Bore:

- a. Remove small dia. O-ring from OE "A" trim solenoid snout and replace with Sonnax O-ring.
- b. Install OE trim valve spring, trim valve, and gain valve spring.
- c. Install Sonnax gain valve, OE solenoid and solenoid retainer.

# SONDAX®

### OVERSIZED GAIN VALVE KIT 37000-24K, F-37000-TL24

## Instructions

### 3. Installation & Assembly (continued)


### "B" Bore:

a. Install OE trim valve spring, trim valve, and Sonnax gain valve.

b. Install Sonnax gain valve, OE solenoid and solenoid retainer.

### 4. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 14 in-Hg.

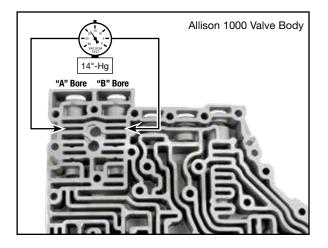

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com