

Instructions

Jatco/Nissan JF016E (RE0F10D), JF017E (RE0F10E)

Oversized Main Pressure Regulator Valve

Part No. 33510N-0

- Valve
- End Plug


Tool Kit

Part No.

F-33510N-TL5

- Reamer
- Reamer Jig
- Guide Pin

NOTE: Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX, a self-aligning valve body reaming fixture. More information and instructions can be found online at www.sonnax.com.

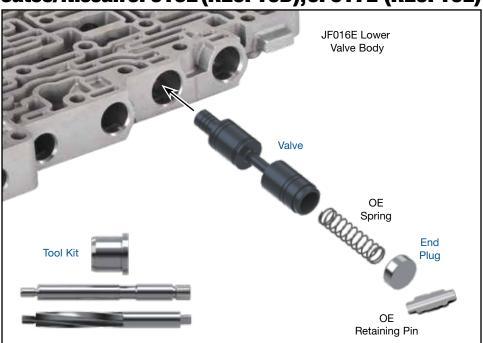

1. Disassembly

- a. Remove and discard OE valve and end plug.
- b. Set aside OE retainer and spring for reuse.

2. Bore Reaming

Ream main pressure regulator bore (for reaming instructions/reamer care, please visit www.sonnax.com). Sonnax reaming tool kit F-33510N-TL5 and VB-FIX are required for this operation.

3. Installation & Assembly

- a. Be certain all debris has been removed from the valve bore and valve body.
- b. Install Sonnax valve.
- c. Reinstall OE spring.
- d. Install Sonnax end plug.
- e. Reinstall OE retainer.

4. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

