

Instructions

6T31/35/41/46/51 (Gen. 3 6T40)

Lube On Demand Valve Kit

Part No. 144510-19K	
• Valve	
• Sleeve	
• O-Rings (2)	1 Extra
• Spring	
• Drill Bit*	.062"
• Plugs* (2)	1 Extra
• Rivets* (2)	1 Extra

*NOTE: For separator plate, not shown.

Patent No. 11,815,176



1. Disassembly

- a. Remove OE retainer and set aside for reuse.
- b. Remove and discard OE valve and spring.


2. Drill & Plug Separator Plate Balance Orifice at Lube Boost Valve


- a. Using Sonnax drill bit, drill lube boost valve balance orifice to .062" (**Figure 1**).
- b. If using straight plug, insert into orifice and peen on both sides of plate.
- c. If using optional small rivet, insert into orifice and using wire cutters, snip the stem end of the rivet if/as necessary to provide for a small head once peened in place. Peen the rivet in place on head side of plate also.
- d. After peening on both sides of the plate, ensure plate will still fit flush on mating surfaces.

3. Installation & Assembly

a. Place O-ring on the valve and sleeve assembly.

- b. Coat O-ring with assembly lube or Sonnax Slippery Stick **O-LUBE** and roll on bench to size.
- c. Install the assembly into the bore with the O-ring end toward the outside of the bore.
- d. Install the Sonnax spring.
- e. Secure components with the OE retainer.

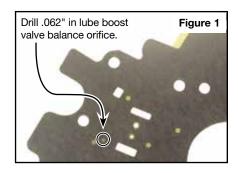

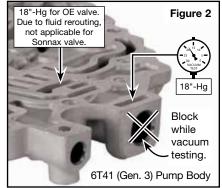

4. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg (**Figure 2**).