

## Instructions



## **Carrier Bearing Identification & Spacer Use**


**NOTE:** The included Sonnax spacer is used only in standard (small) bearing carriers. If you have a big bearing OE, or a Daytona carrier, do not use Sonnax spacer (**Figures 1–3**).

**NOTE:** When using Sonnax spacer, always install behind the pinion nut (like a washer) (**Figure 2**). This spacer is NOT intended to be installed between the yoke and bearing.

Fia	ure	

	Bearing Width*	Pinion Bearing O.D.	Use Sonnax Spacer
Standard Carrier	2.2"	2.675"	Yes
Big Bearing Carrier/Daytona	2.5"	3"	No

\*Bearing width is the width between outer bearing faces when installed in the carrier.

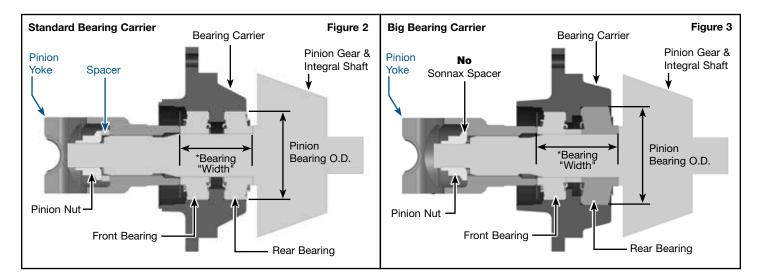

©2021 Sonnax Transmission Company, Inc. • A Marmon/Berkshire Hathaway Company

T9-28-1350FD-IN 11-09-21

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com