

### HIGH PERFORMANCE TORQUE CONVERTER PARTS

Instructions

# **Stator Kit**

### Part No.

GM-ST-8-1835

- Stator
- Outer Ring

**NOTE:** Stator employs 18 flat blades at a 35° angle.



NOTE: Welding is required.




#### 1. Assemble Outer Split Ring

- a. Install Sonnax outer ring onto Sonnax stator.
- b. Ensure the outer ring is centered.
- c. Place a steel hose clamp on the center of the outer ring (**Figure 1**).
- d. Tightly secure the hose clamp.

## 2. Weld Outer Steel Ring

- a. Tack weld the outer ring split gaps on both sides of hose clamp (Figure 1).
- b. Remove the hose clamp.
- c. Continue welding the split gap on the ring.
- d. Weld fill the V-notch.
- e. Remove any excess weld on a lathe.
- f. The outer ring should be tight on the stator after the weld cools (**Figure 2**).

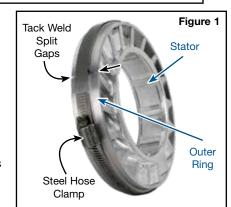

Stator

