
Instructions

Converter Limit Valve Kit

Part No. 126740-25K

- Sleeve
- Valve
- Spring

NOTE: Fits '11-later. See **Figure 3** on page 2 for different year configurations.

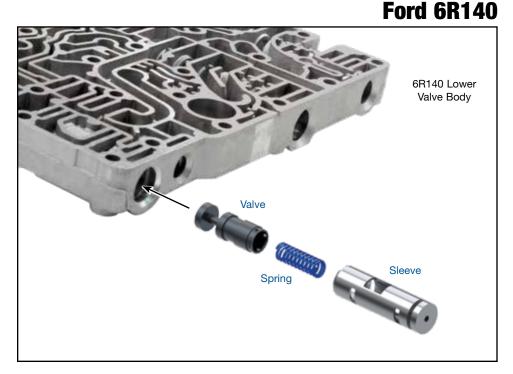

2011-2016

1. Disassembly

- a. Remove OE outboard retainer, end plug, thermal element, bypass valve, and spring. Keep for reuse.
- Remove and discard OE inner end plug, spring, and converter limit valve.
 Keep OE retainer for reuse.

2. Installation & Assembly

- a. Ensure all debris has been removed from valve bore and body.
- b. Insert Sonnax converter valve, sleeve and spring.
- c. Secure in place with OE retainer.
- d. Return OE outboard retainer, end plug, thermal element, bypass valve, and spring in proper order.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg (**Figure 1**, page 2).

2017-Later

1. Disassembly

- a. Remove OE outboard retainer and plug. Keep for reuse.
- Remove and discard OE inner end plug, spring, and converter limit valve. Keep OE retainer for reuse.

2. Installation & Assembly

- a. Ensure all debris has been removed from valve bore and body.
- b. Insert Sonnax converter valve, sleeve and spring.
- c. Secure in place with OE retainer.
- d. Return OE outboard retainer and plug in proper order.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg (**Figure 1**, page 2).



TRANSMISSION PARTS

CONVERTER LIMIT VALVE KIT 126740-25K

