
TRANSMISSION PARTS

Instructions

## **Differential Lube Tube Retainer Kit**

## Part No. 84532-01K

- Top Clamp
- Bottom Clamp
- Screw

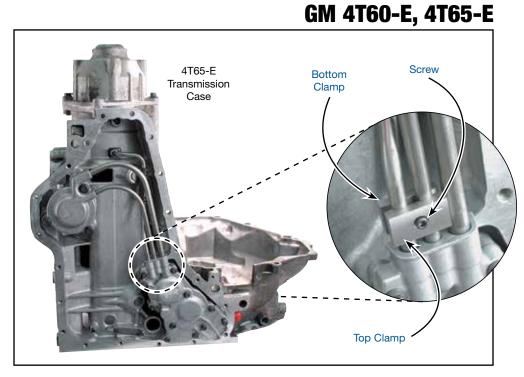

- 1. Place threaded bottom clamp lube tube retainer between the tubes and the case.
- 2. Place top clamp over the tubes.
- 3. Apply a small amount of Loctite® 242 (blue) on the socket head cap screw provided.
- 4. Bolt the two halves together.

©2017 Sonnax Industries, Inc. 84532-01K-IN 02-16-17