

Critical Wear Areas & Vacuum Test Locations Zip



NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

Main Valve Body • JF010E



For specific vacuum test information, refer to individual part instructions included in kits and available at **www.sonnax.com**.

Click on Sonnax part numbers to see more information.

TCC Limit & Lube Valve

- Engine stall in engagement
- No lockup
- Increased RPM during acceleration

Replace with Sonnax Part No. 113741-04K

Requires F-113741-TL4 & VB-FIX

Primary Pressure Regulator Valve

- Chatter on acceleration
- Damaged valve body casting
- Slips in Forward & Reverse

Replace with Sonnax Part No. 113741-09K

Requires F-113741-TL9 & VB-FIX

Secondary Pressure Regulator Valve

- Slips in Forward and Reverse
- Push belt slippage
- Push belt and sheave surface damage

Primary Pulley Control Valve

- No High ratios
- Push belt failure
- Gear ratio errors



Critical Wear Areas & Vacuum Test Locations Zip




NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

Middle Valve Body • JF010E (Front)




For specific vacuum test information, refer to individual part instructions included in kits and available at www.sonnax.com.

Click on Sonnax part numbers to see more information.

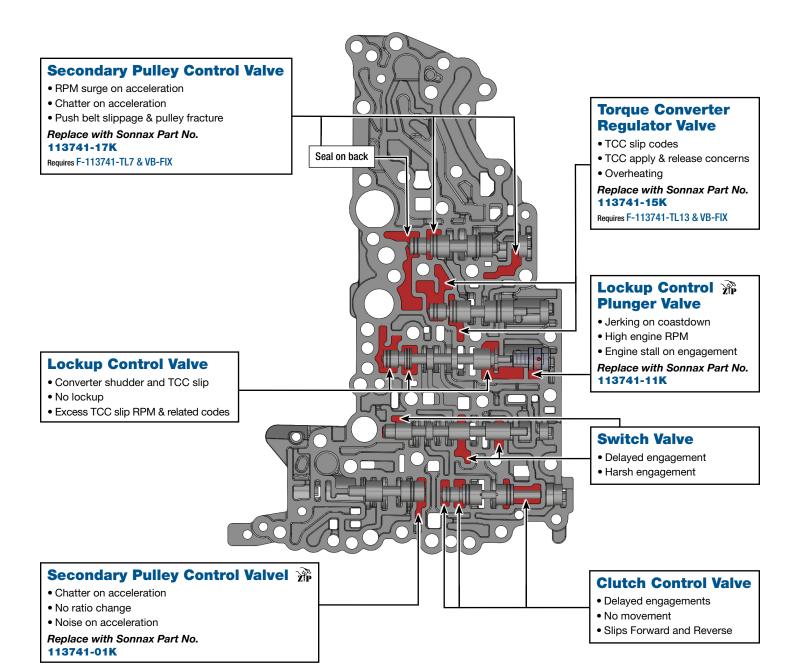



 Critical Wear Areas & Vacuum Test Locations Zip




NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

Middle Valve Body • JF010E (Back)



For specific vacuum test information, refer to individual part instructions included in kits and available at www.sonnax.com.

Click on Sonnax part numbers to see more information.

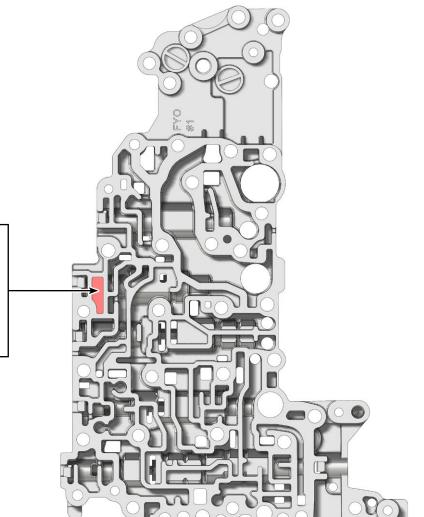

Torque Converter Regulator Valve

- TCC slip codes
- TCC apply & release concerns
- Overheating

Replace with Sonnax Part No. 113741-15K


Requires F-113741-TL13 & VB-FIX



OE Exploded View

Main Valve Body • JF010E

NOTE: Depending upon vehicle application, the OE springs shown may not be present.

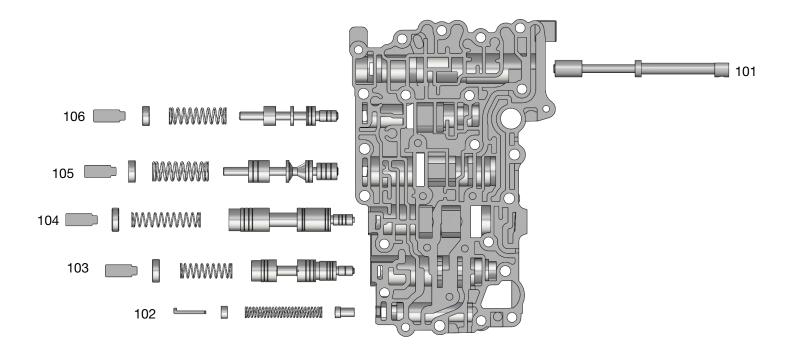


JF010E Main Valve Body Descriptions	
I.D. No.	Description
101	Manual Valve
102	Plug & Spring
103	Primary Pulley Control Valve
104	Primary Pressure Regulator Valve
105	Secondary Pressure Regulator Valve
106	TCC Limit & Lube Valve



OE Exploded View

Middle Valve Body • JF010E

NOTE: Depending upon vehicle application, the OE springs shown may not be present.

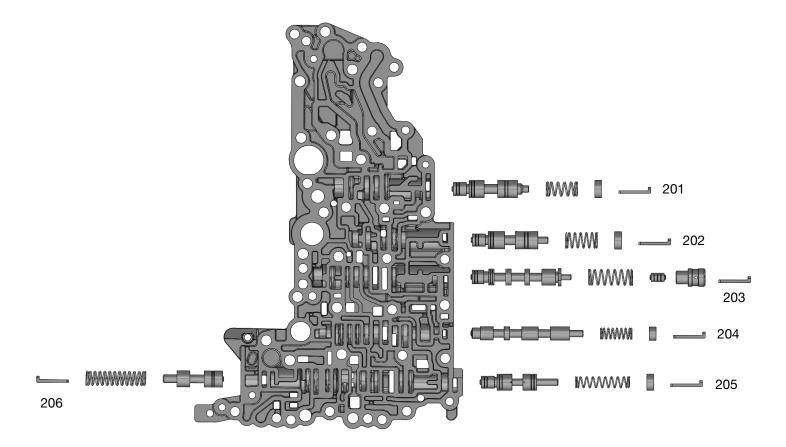

JF010E Middle Valve Body Descriptions		
I.D. No.	Description	
201	Secondary Pulley Control Valve	
202	Torque Converter Regulator Valve	
203	Lockup Control Plunger Valve & Control Valve	
204	Switch Valve	
205	Clutch Control Valve	
206	Secondary Pulley Control Valve	