

Critical Wear Areas & Vacuum Test Locations




NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

Lower Valve Body • 10R80 Shown



For specific vacuum test information, refer to individual part instructions included in kits and available at www.sonnax.com.

Click on Sonnax part numbers to see more information.

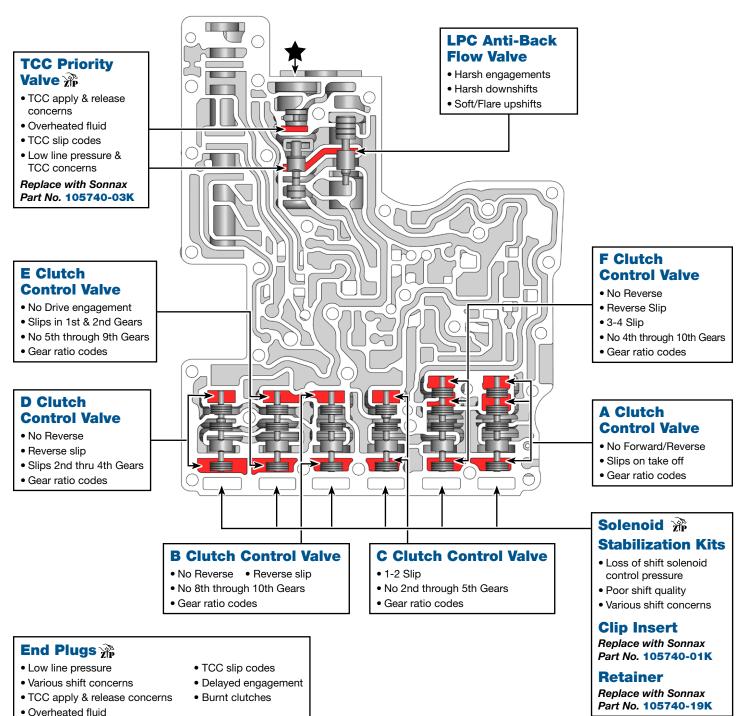

Replace with Sonnax Part Nos. 105740-13K

= Two Locations (One in upper and one in lower valve body).



Critical Wear Areas & Vacuum Test Locations




NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

Upper Valve Body • 10R80 Shown



For specific vacuum test information, refer to individual part instructions included in kits and available at www.sonnax.com.

Click on Sonnax part numbers to see more information.

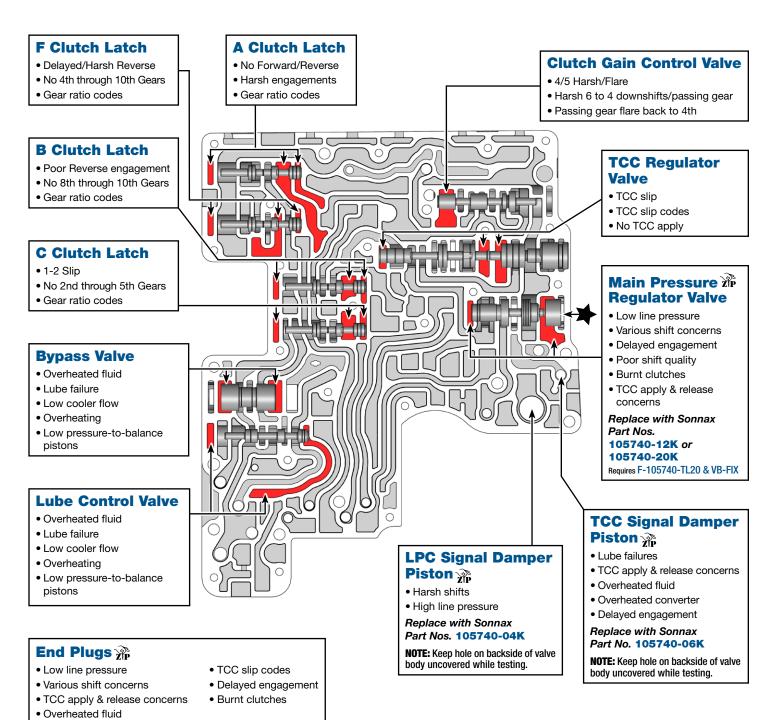

Replace with Sonnax Part Nos. 105740-13K


= Two Locations (One in upper and one in lower valve body).



OE Exploded View

Lower Valve Body • 10L80 (Gen. 1) Shown

NOTE: Depending upon vehicle application, the OE springs shown may not be present.

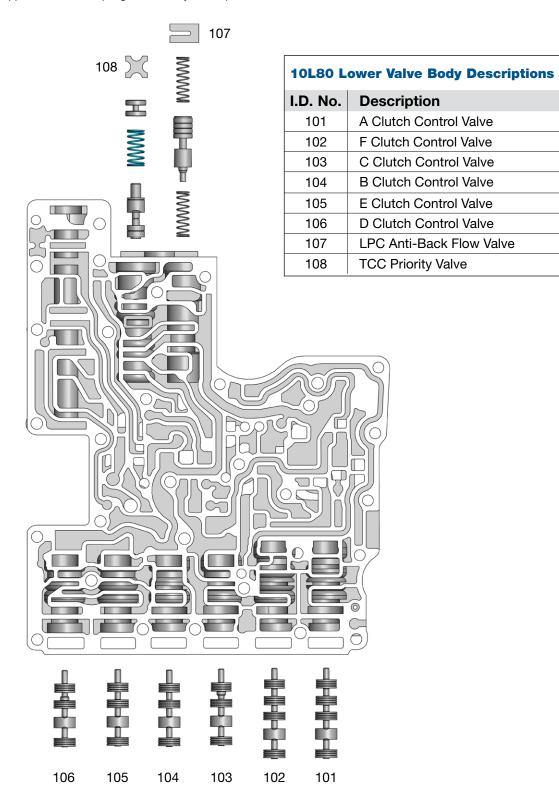



OE Exploded View

Upper Valve Body • 10L80 (Gen. 1) Shown

NOTE: Depending upon vehicle application, the OE springs shown may not be present.

