sonnax


B Drop-In Zip Valve[™] Critical Wear Areas & Vacuum Test Locations ZP Parts Available

NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

Front Control Valve Body - Top Side (Bottom Side Inset) Shown



For specific vacuum test information, refer to individual part instructions included in kits and available at www.sonnax.com.

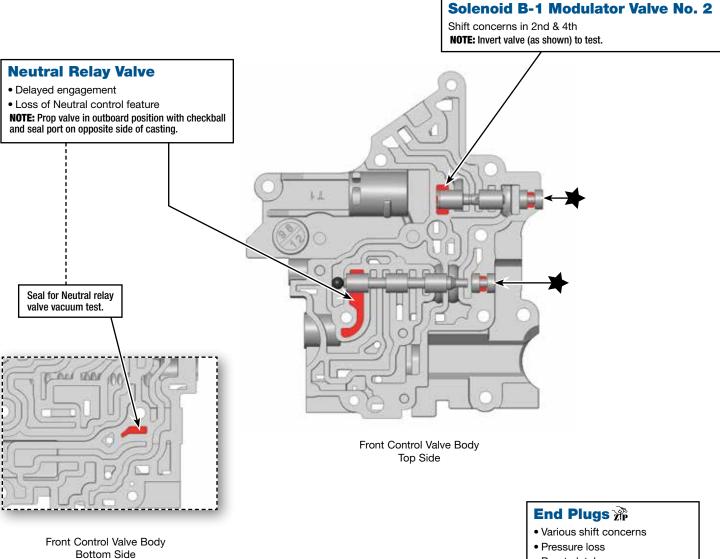


- Burnt clutches
- TCC apply concerns

Replace with Sonnax Part No. 19741-15K NOTE: Several Locations = ★

Critical Wear Areas & Vacuum Test Locations ZP Drop-In Zip Valve[™] Parts Available

NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

Middle Control Valve Body -Top & Bottom Sides Shown

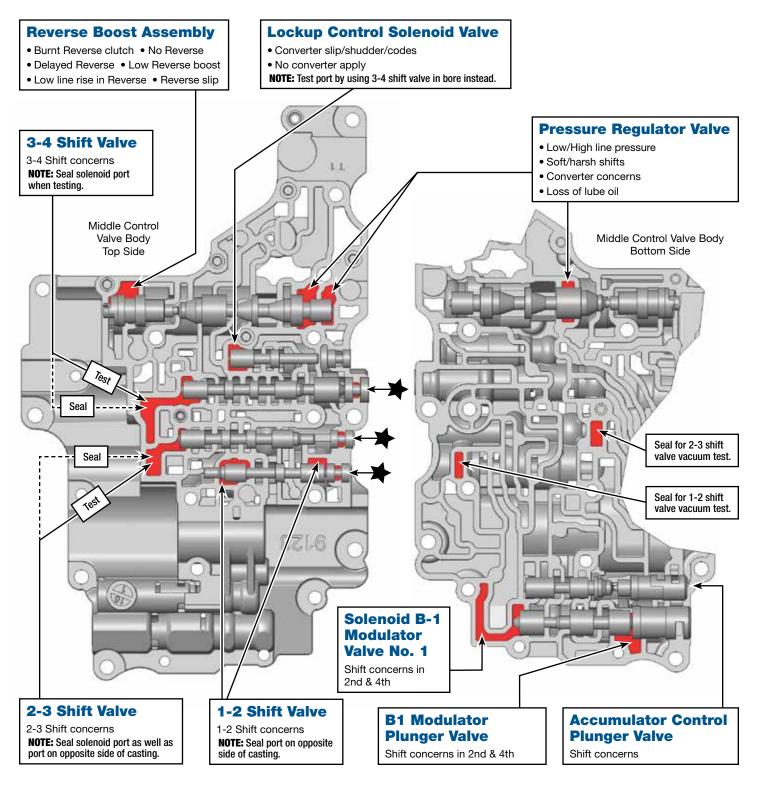

©2020 Sonnax Transmission Company, Inc. • A Marmon/Berkshire Hathaway Company

AW60-41SN-VacTestGuide 10-01-20

sonnax


800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com

Aisin AW 60-41SN

Critical Wear Areas & Vacuum Test Locations ZP Drop-In Zip Valve[™] Parts Available

NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

Rear Control Valve Body -Top Side (Bottom Side Inset) Shown

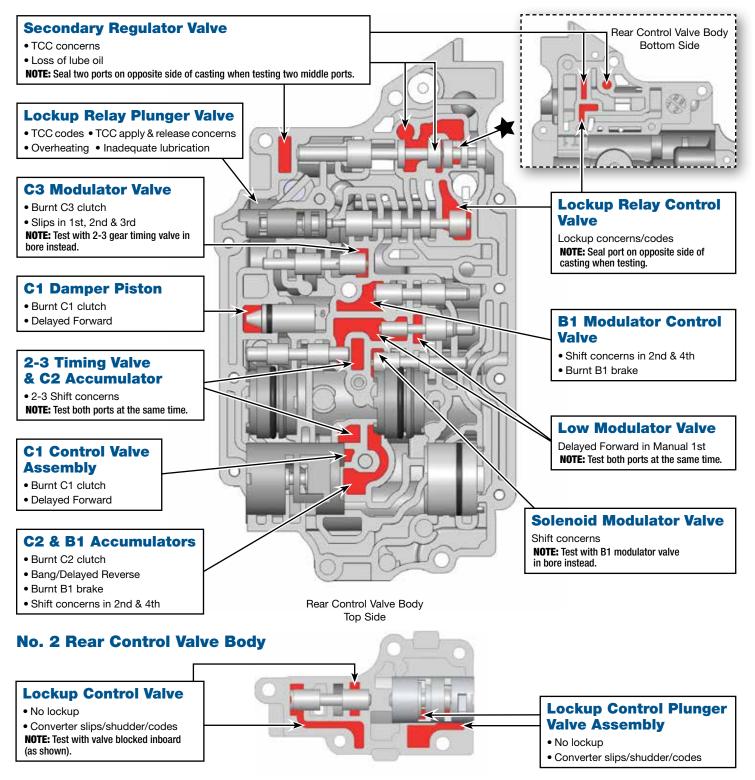

©2020 Sonnax Transmission Company, Inc. • A Marmon / Berkshire Hathaway Company

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com

AW60-41SN-VacTestGuide 10-01-20

sonnax

I.D. No.

201

202

203

204

205

206

207

208

209

208

sonnax

OE Exploded View

Front & Middle Control Valve Bodies Shown Here

Front Control Valve Body Descriptions		
I.D. No.	Description	
101	Solenoid B1 Modulator Valve No. 2	
102	Neutral Relay Valve	

Description

3-4 Shift Valve

2-3 Shift Valve

1-2 Shift Valve

Valve No.1

Pressure Relief Valve


Solenoid B1 Modulator

Plunger Valve Assembly **Primary Regulator Valve**

Pressure Relief Valve

& Reverse Boost Assembly

Lockup Control Solenoid Valve

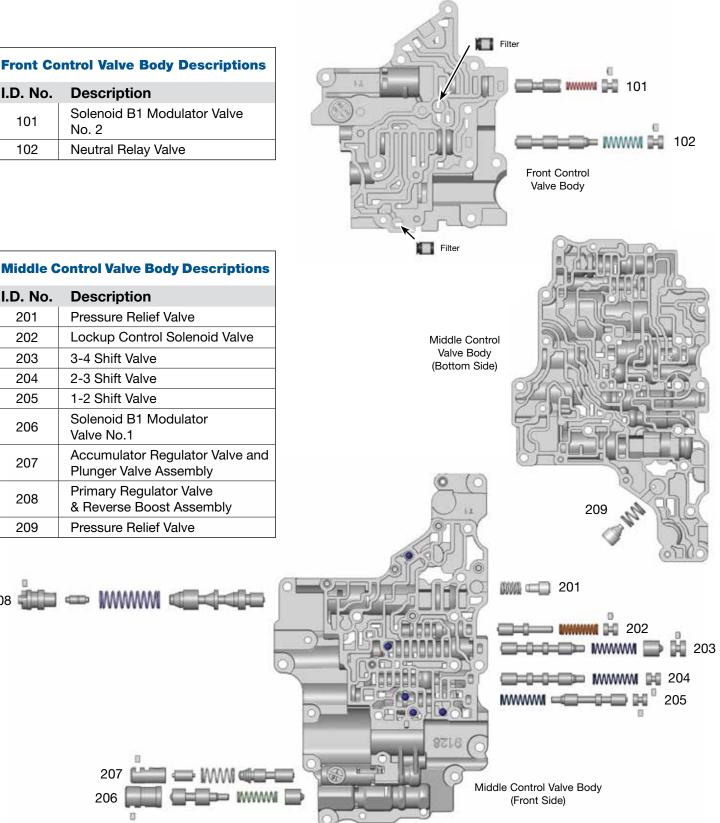

©2020 Sonnax Transmission Company, Inc. • A Marmon / Berkshire Hathaway Company

AW60-41SN-VacTestGuide 10-01-20

=


207

206

sonnax

OE Exploded View

Rear & No. 2 Rear Control Valve Bodies Shown Here

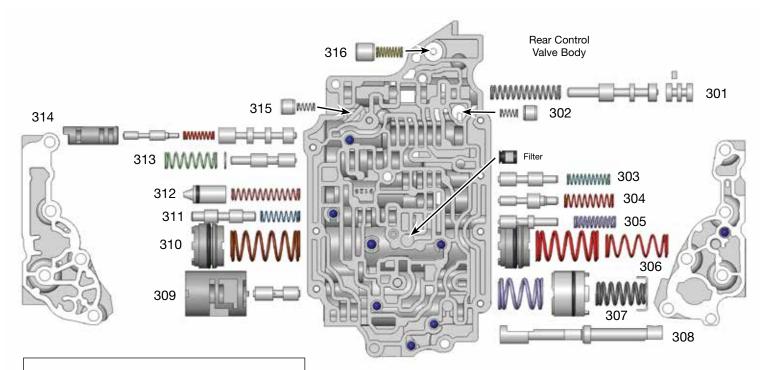

Rear Control Valve Body Descriptions		
I.D No.	Description	
301	Secondary Regulator Valve	
302	Check Valve	
303	B1 Modulator Control Valve	
304	Low Modulator Valve	
305	Solenoid Modulator Valve	
306	C2 Accumulator	
307	B1 Accumulator	
308	Manual Valve	
309	C1 Control Valve Assembly	
310	C0 Accumulator	
311	2-3 Timing Valve	
312	C1 Damper Piston	
313	C3 Modulator Valve	
314	Lockup Relay Control Valve & Plunger Assembly	
315	Check Valve	
316	Check Valve	



I.D. No.	Description
401	TCC Control Valve & Plunger Valve Assembly

©2020 Sonnax Transmission Company, Inc. • A Marmon/Berkshire Hathaway Company