
GM 4L80-E, 4L85-E

Critical Wear Areas & Vacuum Test Locations ZP Parts Available

NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

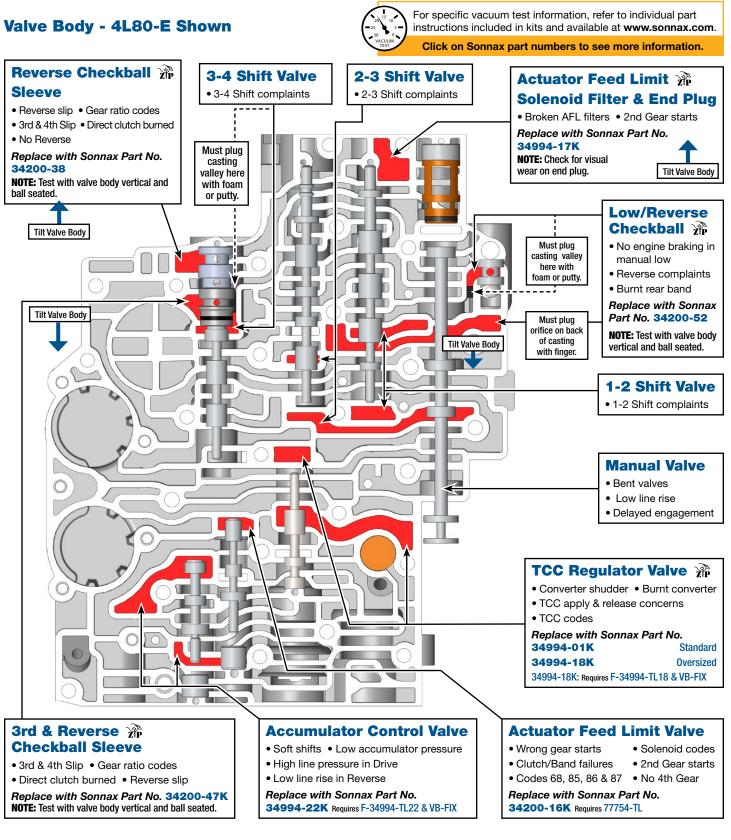

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com


sonnax

GM 4L80-E, 4L85-E

sonnax

Critical Wear Areas & Vacuum Test Locations ZP Parts Available

NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

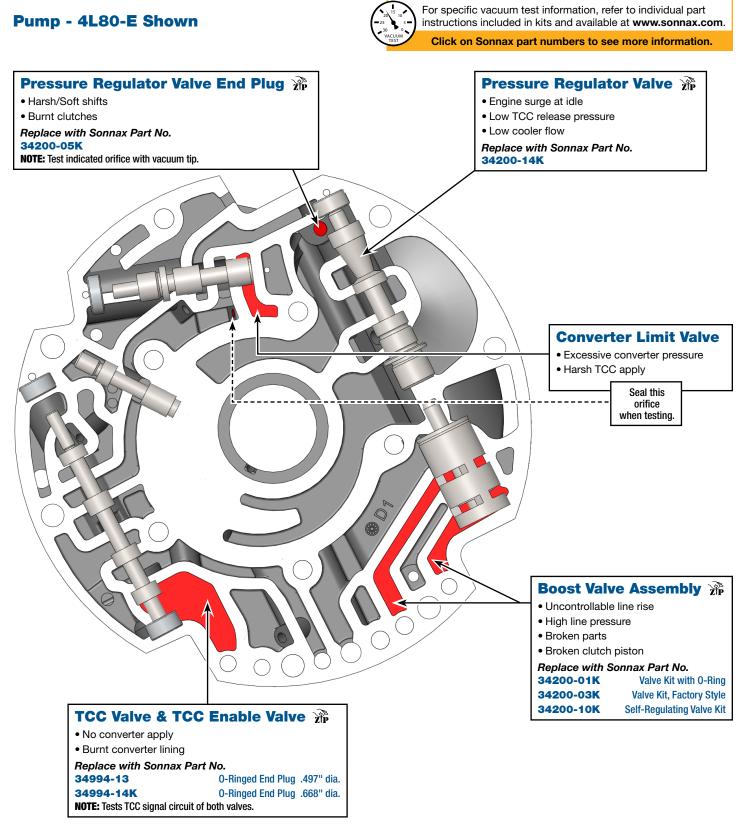


©2021 Sonnax Transmission Company, Inc. • A Marmon/Berkshire Hathaway Company

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com

OE Exploded View

Valve Body - 4L80-E Shown

Valve Body Descriptions		
I.D. No.	Description	
101A	3rd/Reverse Checkball & Sleeve (Outboard, Early Style) 3-4 Shift Valve (Inboard)	
101B	Reverse Checkball Sleeve (Outboard), 3rd Checkball Sleeve (Center), 3-4 Shift Valve (Inboard)	
102	2-3 Shift Valve	
103	1-2 Shift Valve	
104	Actuator Feed Limit Solenoid Filter & End Plug	
105	Checkball	
106	Force Motor Feed Filter	
107	Manual Valve	
108	TCC Regulator Valve	
109	Actuator Feed Limit Valve	
110	Accumulator Control Valve	

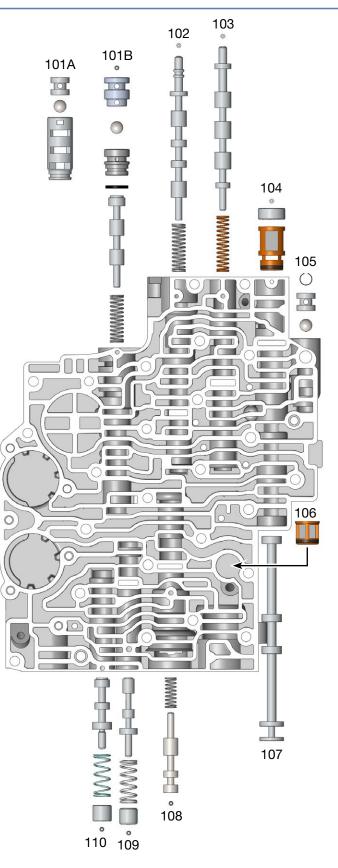

©2021 Sonnax Transmission Company, Inc. • A Marmon/Berkshire Hathaway Company



sonnax

OE Exploded View

Pump - 4L80-E Shown

Valve Body Descriptions		
I.D. No.	Description	
201	Converter Limit Valve	
202	TCC Enable Valve	
203	Pressure Regulator Valve (Inboard)	
203	Boost Valve Assembly (Outbound)	
204	TCC Valve	

