


Critical Wear Areas & Vacuum Test Locations Zip

Drop-In Zip Valve™

Parts Available

NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

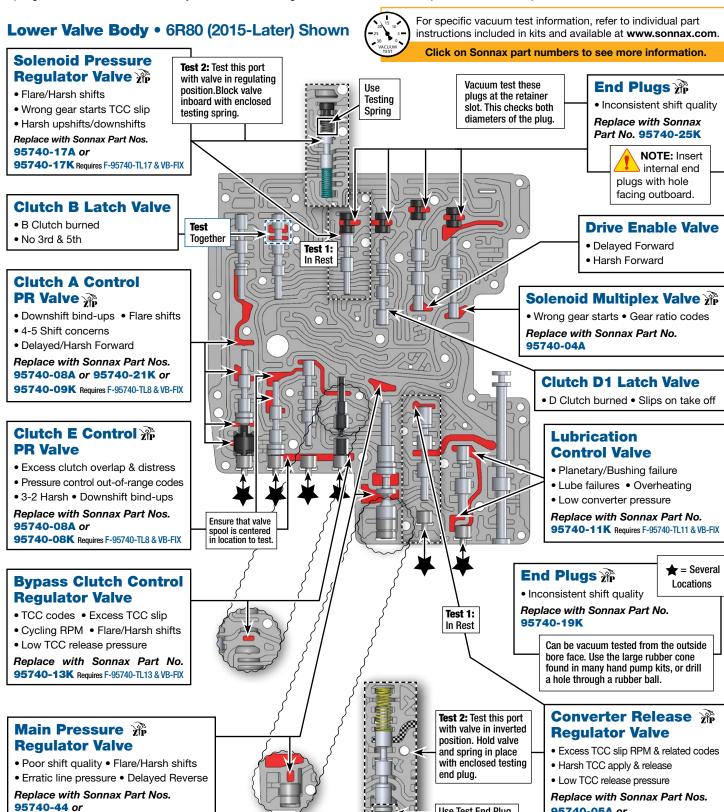

©2023 Sonnax Transmission Company, Inc. • A Marmon/Berkshire Hathaway Company

6R80L-6R100-VacTestGuide 07-13-23

95740-05K Requires F-95740-TL5 & VB-FIX

95740-05A or

Use Test End Plug

95740-46K Requires F-95740-TL & VB-FIX



Critical Wear Areas & Vacuum Test Locations Zip

TILICAL WEAR AREAS & VACUUM TEST LOCATIONS ZIP Parts Available

NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

Upper Valve Body • 6R80 (2015-Later) Shown



Test accumulator pistons inverted and off center.

For specific vacuum test information, refer to individual part instructions included in kits and available at www.sonnax.com.

Click on Sonnax part numbers to see more information.

Accumulator Pistons

- Downshift clunk
- Firm shifts
- Erratic EDS solenoid control/EDS codes

Replace with Sonnax Part No. 95740-15K

OE accumulator pistons should be flush with or approximately .030" lower than the casting surface. It is common for the rubber insert to lose tension.

Each of these pistons can be vacuum tested from the exhaust hole on the opposite side of the casting.

End Plugs 🏤

★ = Several Locations

Inconsistent shift quality

Replace with Sonnax Part No. 95740-19K

Can be vacuum tested from the outside bore face. Use the large rubber cone found in many hand pump kits, or drill a hole through a rubber ball.

Clutch C Regulator Valve

- 2nd & 6th Slip
- Clutch failure
- Poor shift quality
- Ratio errors

Replace with Sonnax Part No. **95740-40K**

Requires F-95740-TL40 & VB-FIX

Clutch B Regulator Valve

- B Clutch burned
- 3rd & 5th Slips
- Slips in Reverse

Clutch D2 Latch Valve

- Downshift clunk
- 1-2 Bind-up

Clutch D1 Control % Pressure Regulator Valve

- Bumpy 1-2 upshift
- 2-1 Downshift flare or neutral
- EDS 3 control code

Replace with Sonnax Part No. 95740-08A




OE Exploded View

Lower Valve Body • 6R80 (2015-Later) Shown

NOTE: Depending upon vehicle application, the OE springs shown may not be present.


| Lower Valve Body Descriptions | | |
|-------------------------------|--|--|
| I.D. No. | Description | |
| 101 | Manual Valve | |
| 102 | Lubrication Control Valve | |
| 103 | Converter Release Regulator Valve | |
| 104 | Main Pressure Regulator Valve | |
| 105 | Bypass Clutch Control Regulator Valve | |
| 106 | Clutch E Latch Valve | |
| 107 | Clutch E Control Pressure Regulator Valve | |
| 108 | Clutch A Control Pressure Regulator Valve | |
| 110 | Solenoid Multiplex Valve | |
| 111 | Drive Enable Valve | |
| 112 | Clutch D1 Latch Valve | |
| 113 | Solenoid Pressure Regulator Valve | |
| 115 | Clutch B Latch Valve | |
| 116 | Clutch A Latch Valve | |

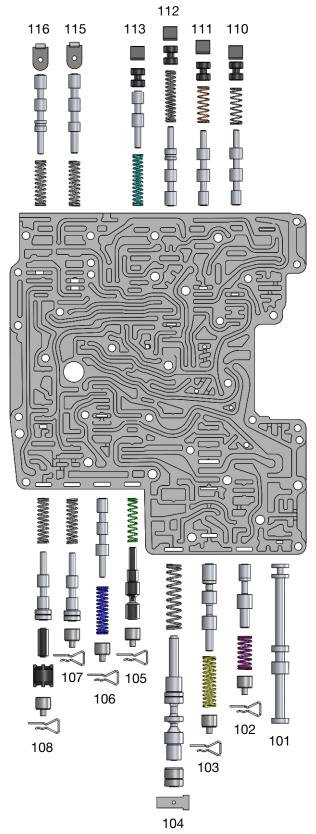



OE Exploded View

Upper Valve Body • 6R80 (2015-Later) Shown

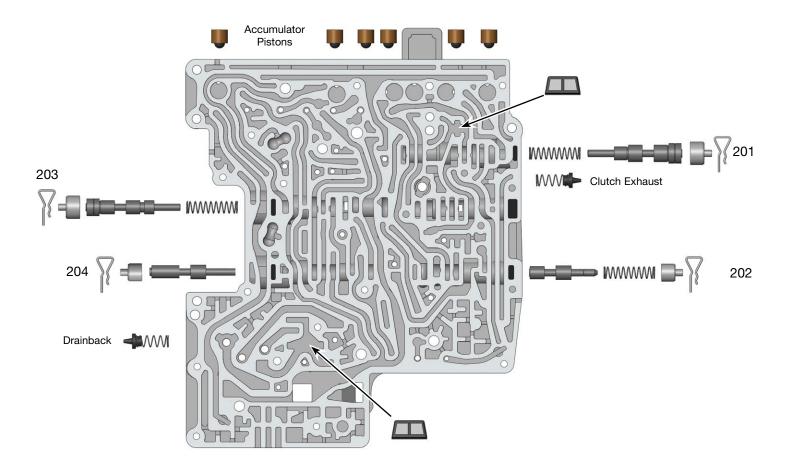

| Upper Valve Body Descriptions | | |
|-------------------------------|---|--|
| I.D. No. | Description | |
| 201 | Clutch B Regulator Valve | |
| 202 | Clutch D2 Latch Valve | |
| 203 | Clutch C Regulator Valve | |
| 204 | Clutch D1 Control Pressure Regulator Valve | |