


3-2 Control Valve Spring

3-2 Control Valve Spring


77754-23

1 3-2 Control Valve Spring

Note: This spring works only in 1996 and later on/off- style 3-2 control valve bodies. It will not work in 1993-95 PWM-style 3-2 control valve bodies.

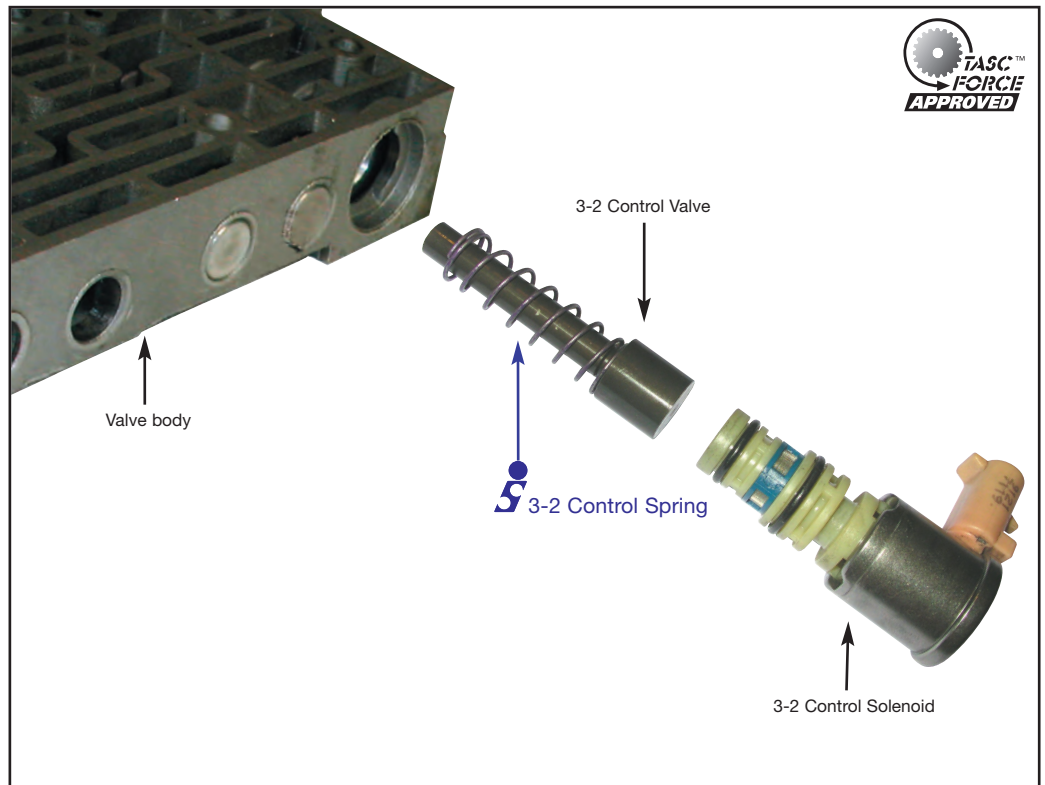

Verify Original Valve Design

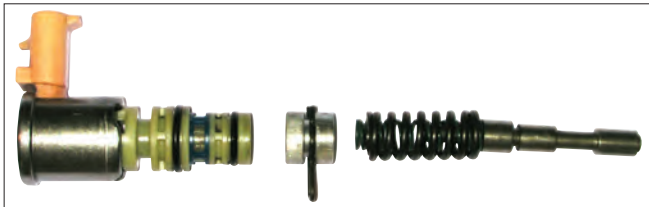


Pre-1996 PWM Style 4L60-E.
Sonnax spring DOES NOT work in this location.



1996-Up On/Off Style 4L60-E.
Sonnax spring works in this location.

Installation Instructions

1. Remove 3-2 control valve solenoid, 3-2 control valve and spring.
2. Discard OEM spring. If the OEM spring is broken, ensure that all pieces are accounted for before proceeding.
3. Reassemble with replacement spring. Reference the photo for proper orientation.

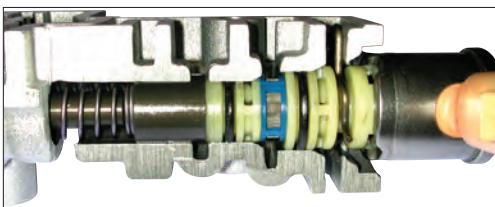

Sonnax spring in 4L60-E valve body.
Illustrates the correct installation and orientation of parts.