


## Pressure Regulator Boost Sleeve Kit

**93990**

1 Boost Sleeve

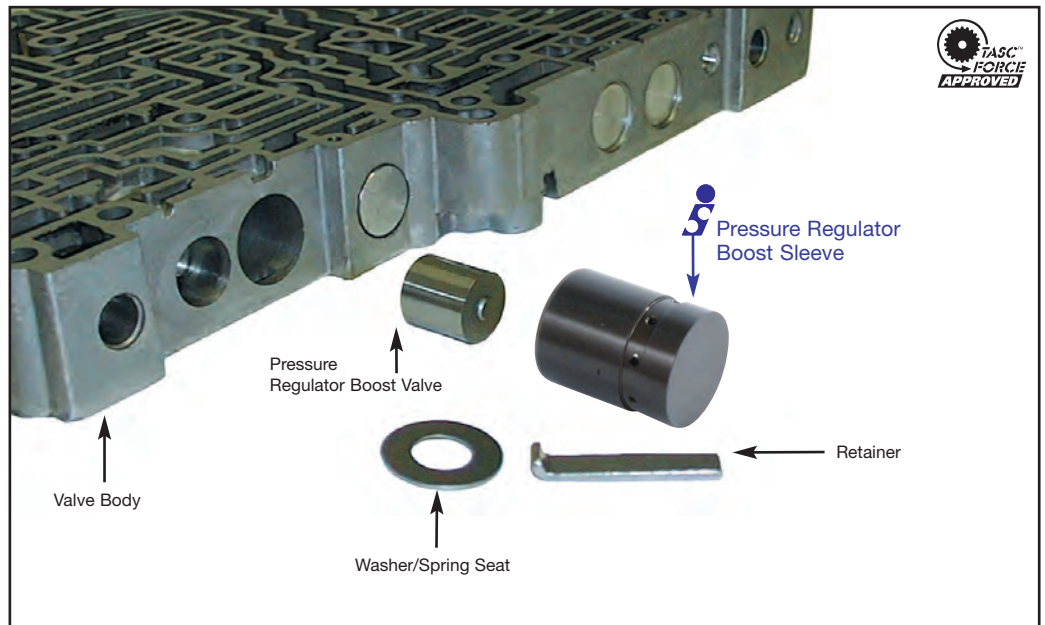

### Installation Instructions

1. Remove the worn pressure regulator boost sleeve from the valve body and discard.
2. Insert the boost valve into the new replacement boost sleeve.
3. Ensure that the washer is properly seated on the springs in the valve body bore.
4. Push the boost sleeve assembly into the valve body bore, just far enough to return the retainer.

### Wet Air Test

Place ATF into the cavity that feeds the boost sleeve porting. Isolate the cavity with a plate and pressurize. Leakage exiting the valve end of sleeve is lost boost/line rise. Line pressure solenoid and pilot valve are associated with similar complaint and may need to be serviced also.

