


Instructions

Ford 6F50/6F55, GM 6T70/6T75

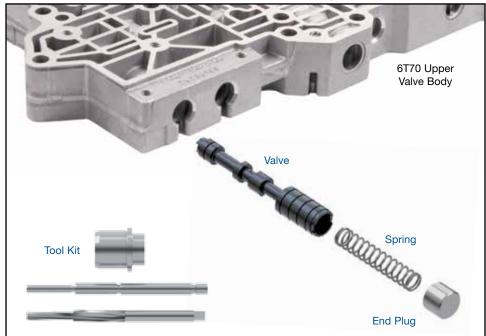

1. Disassembly

- a. Remove OE retaining clip and set aside for reuse.
- b. Remove and discard OE end plug, spring and pressure regulator valve.

2. Bore Reaming

Ream pressure regulator bore (for reaming instructions/reamer care, please visit www.sonnax.com). Sonnax reaming tool kit **F-124740-TL12** and **VB-FIX** are required for this operation.




NOTE: Clear chips from reamer and bore often to ensure full ream depth in blind bore.

3. Installation & Assembly

- a. Be certain all debris has been removed from valve bore and valve body.
- b. Install Sonnax pressure regulator valve.
- c. Install Sonnax spring, ensuring it is seated inside pressure regulator valve spring pocket.
- d. Install Sonnax end plug.
- e. Reinstall OE retaining clip.

4. Final Testing

Vacuum tests at the ports indicated hold the recommended minimum in-Hg.

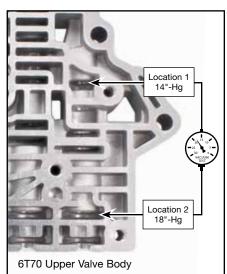

Oversized Pressure Regulator Valve Kit



- Valve
- Spring
- End Plug



- Reamer
- Reamer Jig
- Guide Pin

NOTE: Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX, a self-aligning valve body reaming fixture. More information and instructions can be found online at www.sonnax.com.