sonnax®

TRANSMISSION PARTS

Instructions

Ford 5R55N, 5R55S, 5R55W

TCC Control Valve Springs

Part No.
56947J-S3

Springs (5)

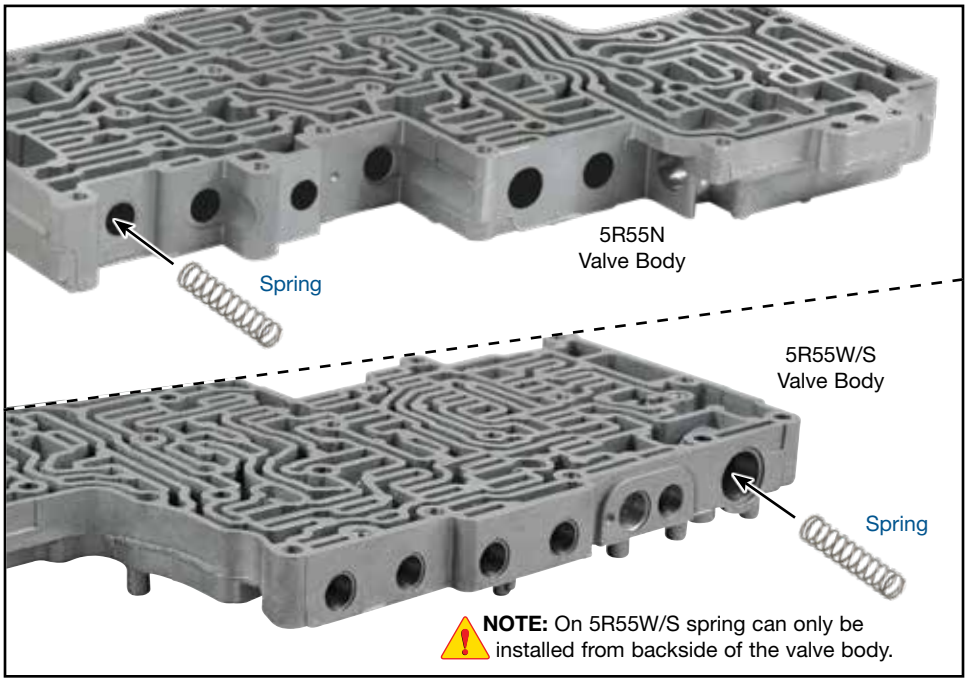

1. Disassembly

a. Remove OE valve train parts.

b. Discard OE TCC control valve spring and keep all other parts for reuse.

2. Installation & Assembly

Reinstall OE valve train parts, replacing TCC control valve spring and secure with retaining clip.

NOTE: On 5R55W/S spring can only be accessed from the backside of the valve body. It is the innermost spring of the bore.

©2022 Sonnax Transmission Company, Inc. • A Marmon / Berkshire Hathaway Company

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com