sonnax®
TIME TESTED • INDUSTRY TRUSTED®

REMANUFACTURED VALVE BODIES

Instructions

Bolt Installation & Torque Specs

C6 Remanufactured Valve Body

(Gas)

Part No.
F062

C6 Remanufactured Valve Body

(Diesel)

Part No.
F063

NOTE: C6 Gas and Diesel valve bodies look identical externally. However, they are calibrated differently internally and cannot be interchanged.

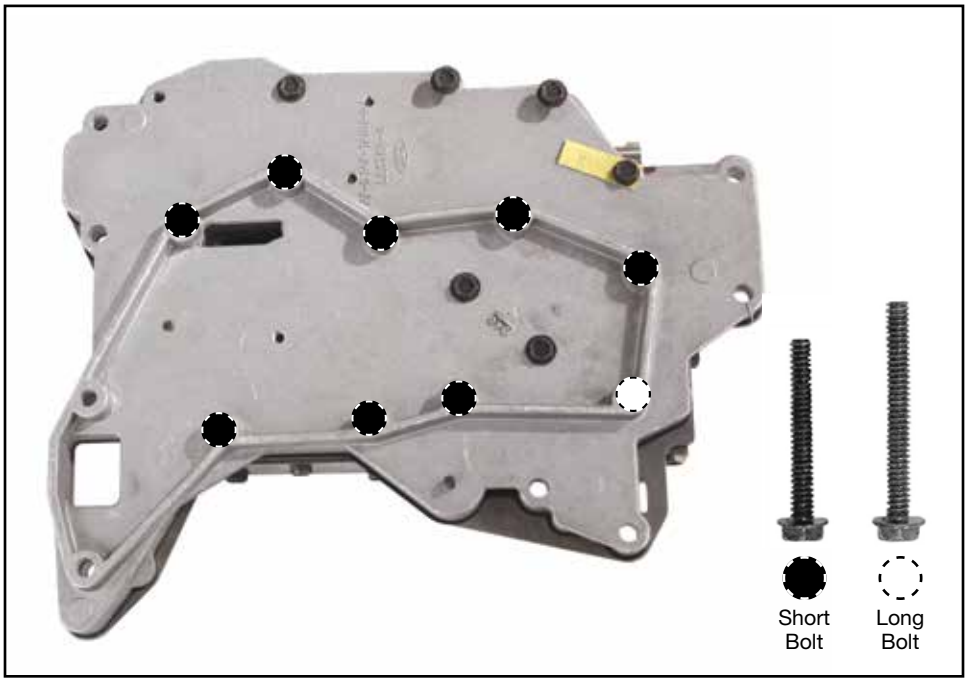

1. Before Installing onto Case

Install filter onto the valve body with the 5/16 bolts noting where the longer bolt is located (shown above). Torque bolts to 45 in-lb.

2. Case Installation

a. Install the valve body onto case aligning manual valve.

b. Install valve body to case bolts. Torque bolts to 100 in-lbs.

©2017 Sonnax Industries, Inc.