


Instructions

Ford 5R110W



Part No. 36885

NOTE: Replaces both waved (gas) and flat (diesel) OE designs.

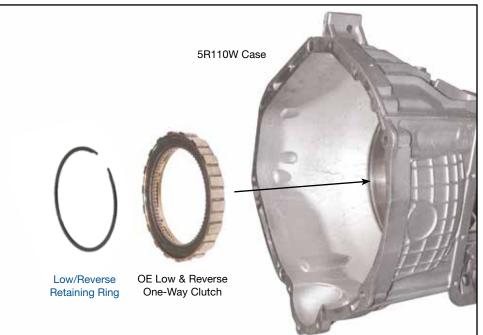

1. Disassembly

Remove and discard the OE low/ reverse retaining ring.

2. Installation & Assembly

Install Sonnax low/reverse retaining ring so that ring ends are in the gaps between the lugs at the 12 O'clock position at the top of the case (see illustration).

