


TCC Boost Valve Kit

Part No.

119940-01K

- Boost Valve
- Boost Sleeve
- Spring

VW/Audi 01M, 01N, 01P

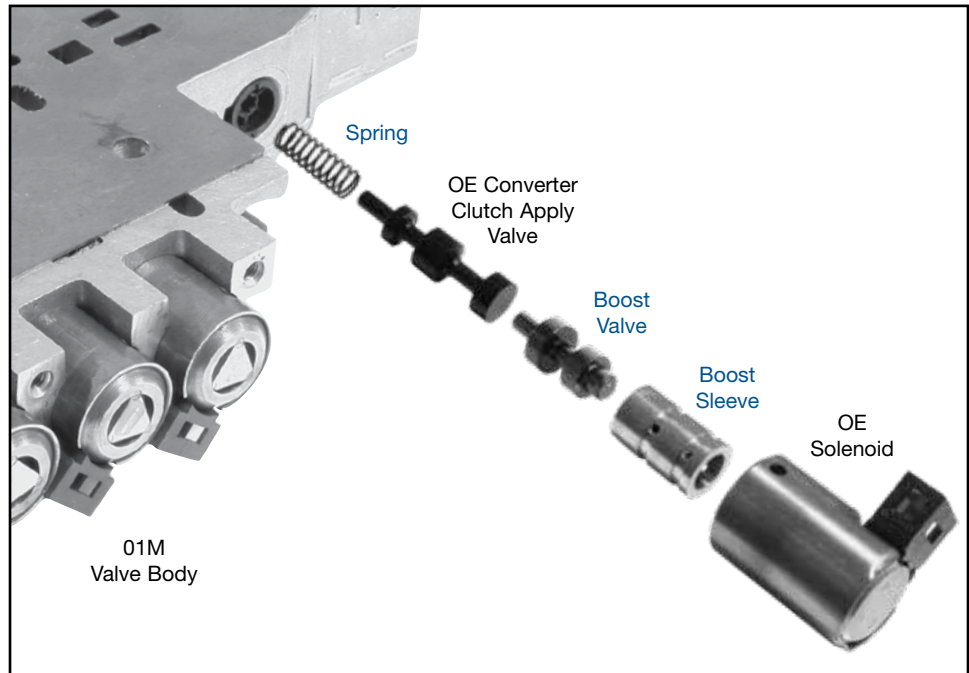

1. Disassembly

- Remove all components from TCC boost valve bore.
- Save OE solenoid and converter clutch apply valve for reuse.
- Discard OE spring, boost valve and sleeve.

2. Installation & Assembly

- Be certain all debris has been removed from the valve bore and valve body.
- Place Sonnax spring on OE converter clutch apply valve nose and insert into bore nose end first.
- Insert Sonnax boost valve and sleeve.
- Reinstall OE solenoid.