


Wide Front Stator Support Bushing

Part No.

34016-W

Bushings (4)

GM 4L80-E, 4L85-E

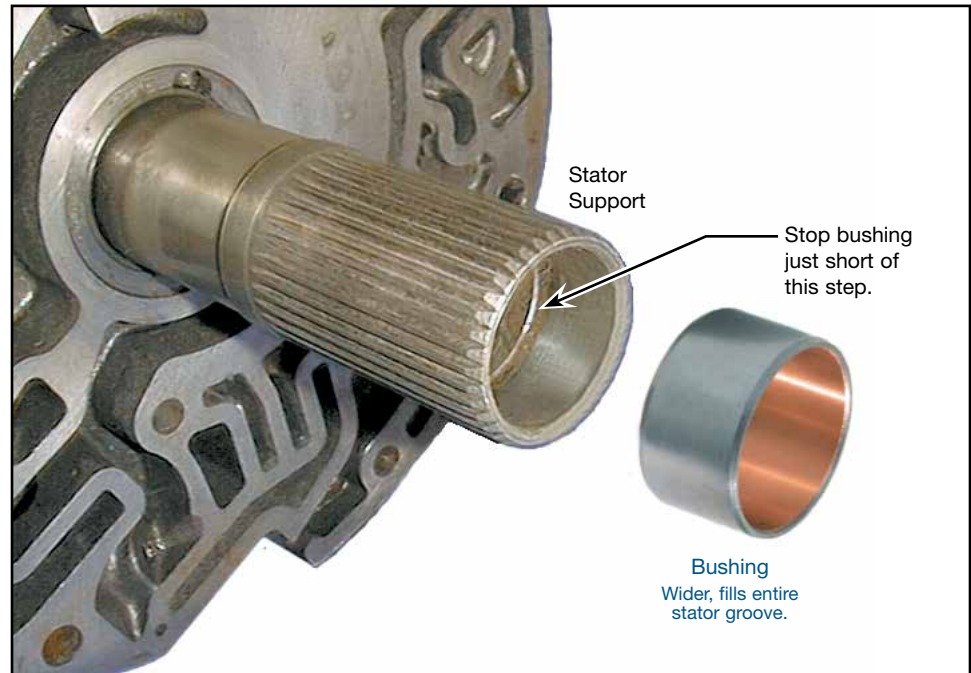

1. Remove worn bushing from the front of the stator support.
2. Press in Sonnax bushing.



NOTE: During installation, make sure bushing stops just short of step inside stator tube, as shown above. If contact is made with step, it will distort bushing and cause inner diameter to narrow, resulting in fitment issues.

3. Check fit between bushing I.D. and input shaft. In some cases it may be necessary to hone the bushing I.D. slightly for proper fit due to stator shaft variations. Hone I.D. to .001" overall clearance with the input shaft.