

## Boost Valve Kit


### Part No.

**34910-05K**

- Valve
- Sleeve

**NOTE:** Factory Style, No O-Rings.

## GM TH400

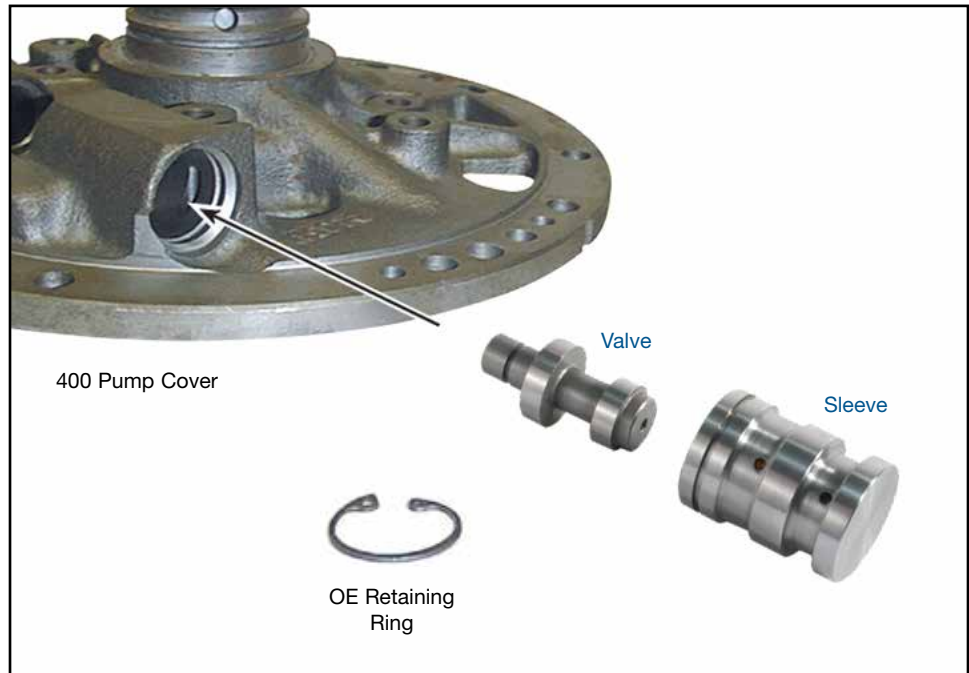

### 1. Disassembly

- Discard OE boost sleeve and valve.
- Keep OE spring and retaining ring for reuse.

### 2. Instruction & Assembly

- Lubricate Sonnax valve and sleeve.
- Insert valve into sleeve with long stem facing out as shown.
- Carefully insert Sonnax assembly into pump body with open end toward OE spring.
- Insert only deep enough to reinstall OE retaining ring.