

## Boost Valve Kit


### Part No.

**36941-01K**

- Valve
- Sleeve
- O-Rings (3)

**NOTE:** Fits clicker style units, '76-earlier and does not recalibrate shift timing or allow gas/diesel valve body interchange.

## Ford C6

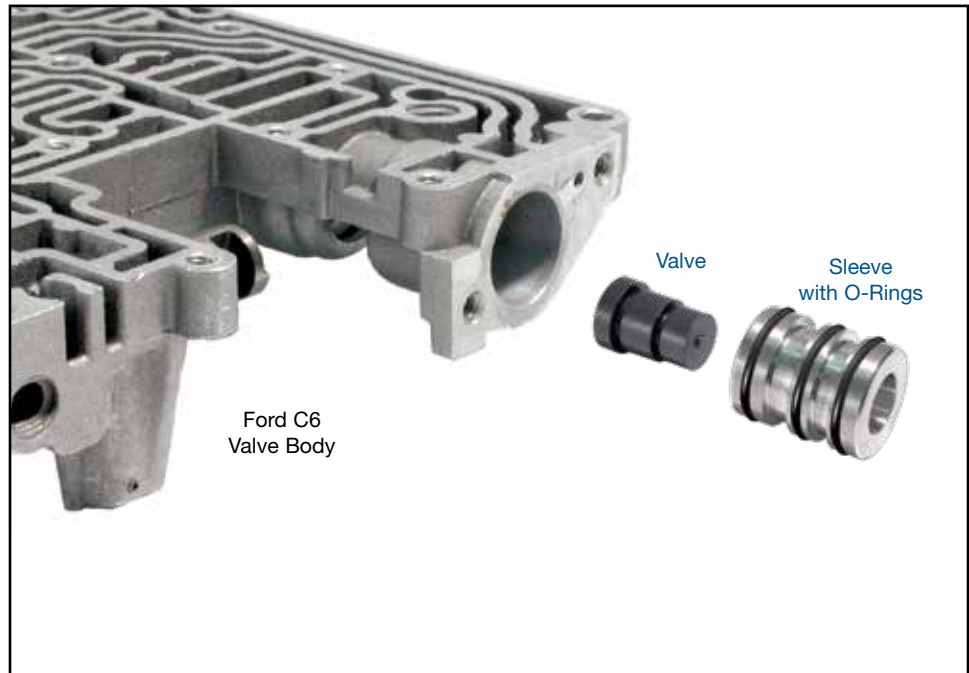

### 1. Disassembly

- Remove OE retaining plate and set aside for reuse.
- Remove and discard OE boost sleeve/valve.

### 2. Installation & Assembly

- Place O-rings into grooves on Sonnax boost sleeve.
- Lubricate O-rings with Sonnax O-Lube. Roll O-ringed sleeve on the bench to size O-rings into the grooves.
- Insert Sonnax valve into Sonnax sleeve.
- Insert Sonnax sleeve and valve assembly into bore with a slight twisting motion.
- Reinstall retaining plate and screws.

### 3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 14 in.-Hg.

