


Wiring Harness Connector Bracket

Part No.
73949-01

Ford CD4E; Mazda LA4A-EL

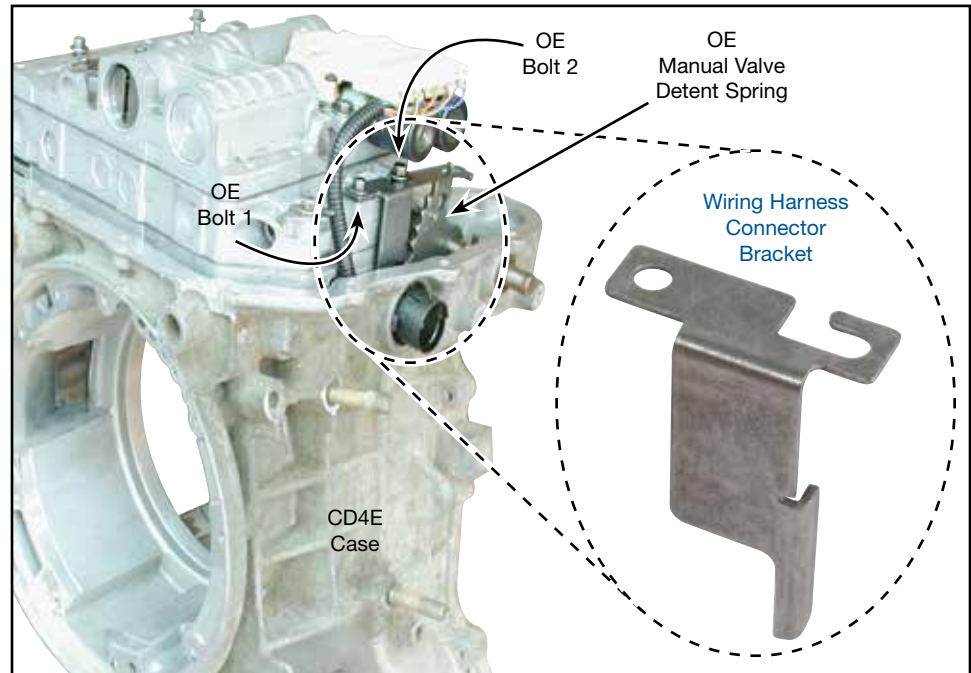

1. Disassembly

- Remove OE manual valve detent spring bolt (**bolt 1**), to the left of the solenoids, and save for reuse.
- Loosen OE manual valve detent spring bolt (**bolt 2**), under the solenoids, and save for reuse.

2. Installation & Assembly

- Hold OE connector in position and slide Sonnax bracket down behind connector.
- Reinstall bolt 1 and retighten both OE bolts.