

## Boost Valve Kit


### Part No.

**76948-02K**

- Valve
- Sleeve

**NOTE:** Fits all '91-later.

## Ford 4R70E, 4R70W, 4R75E, 4R75W, AODE

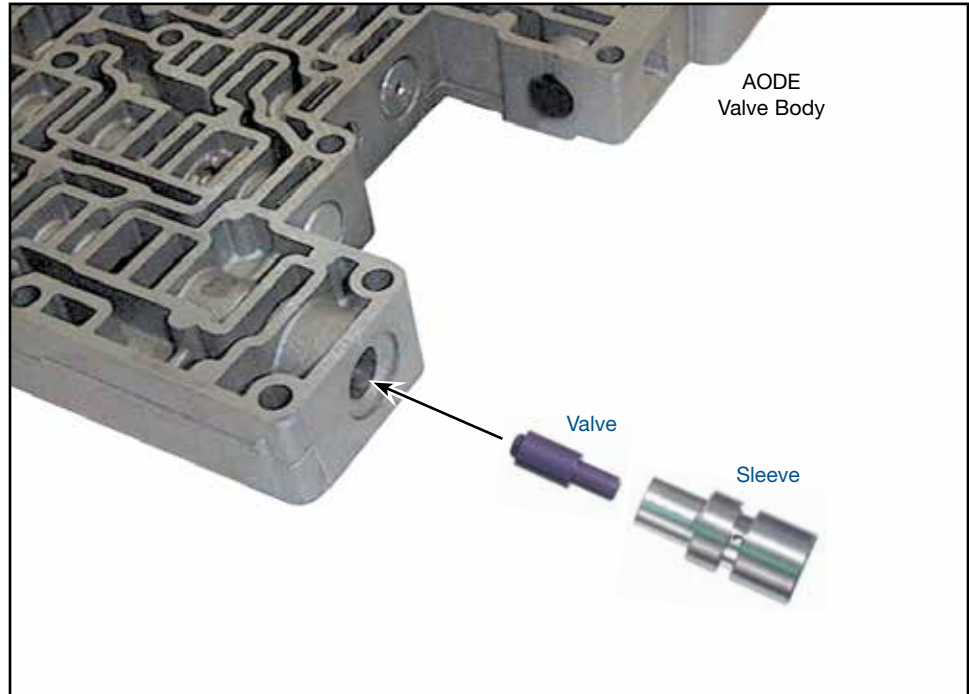

### 1. Installation & Assembly

- Remove OE retainer and set aside for reuse.
- Remove and discard OE boost sleeve and boost valve.



**NOTE:** Some units have a small Reverse boost spring in the OE boost assembly. It is not necessary to transfer this spring to the Sonnax boost assembly, although it may be used if desired. Installing spring into Sonnax boost assembly will result in slightly quicker Reverse line rise.

- Install Sonnax boost valve and sleeve.
- Secure with OE retainer.

### 2. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 16 in-Hg.

