TRANSMISSION PARTS

Instructions

GM 200-4R, 4L60


TV Boost Valve Kit

Part No. 77917-03K

• Valve

• Sleeve .471" dia.

NOTE: Factory-style sleeve.

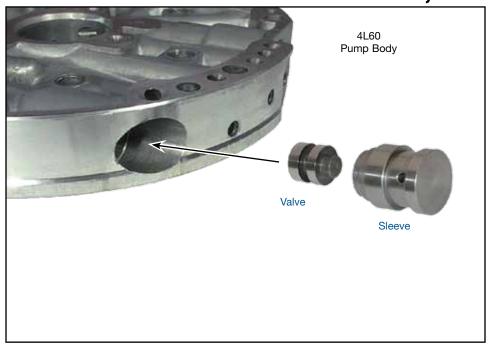

1. Disassembly

- a. Remove snap ring and save for reuse.
- b. Remove and discard OE boost sleeve and valve.

2. Installation & Assembly

- a. Install Sonnax valve into Sonnax sleeve with the nubbed end facing in.
- b. Lubricate the bore and throttle valve sleeve and carefully push the Sonnax assembly in just far enough to reinstall OE snap ring.

Sonnax Part No.	Sleeve Dia.	Performance Application
77917-02K	.423" dia.	Minimum line pressure for V6 applications and smaller vehicles
77917-03K	.471" dia.	Higher line pressure for towing and off-road
77917-04K	.500" dia.	Maximum line pressure & shift feel for high performance applications