


Boost Valve Kit

Part No.

86940-05K

- Valve
- Sleeve

Ford ATX

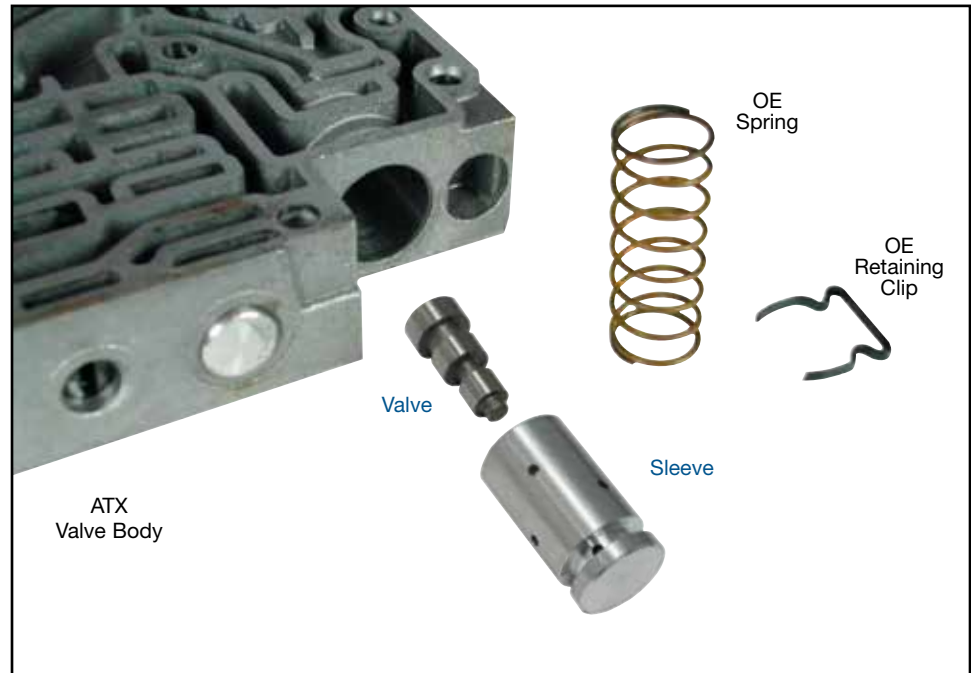

1. Disassembly

- Remove OE sleeve and valve from bore and discard.
- Save OE retainer for reuse.

2. Installation & Assembly

- Reinstall OE spring.
- Insert Sonnax sleeve and valve into the bore, open end of sleeve goes first.
- Push combo in just far enough to reinstall OE retaining clip.