

## Boost Valve Kit

### Part No.

# 89010-02K


- Sleeve
- Valve

**NOTE:** High Ratio (see chart).

#### Identification Chart

Part No.	Small Dia.	Large Dia.	Ratio	Groove
89010-01K	.482"	.565"	Low	No
89010-02K	.482"	.583"	High	Yes

## Toyota/Lexus A130, A131, A140

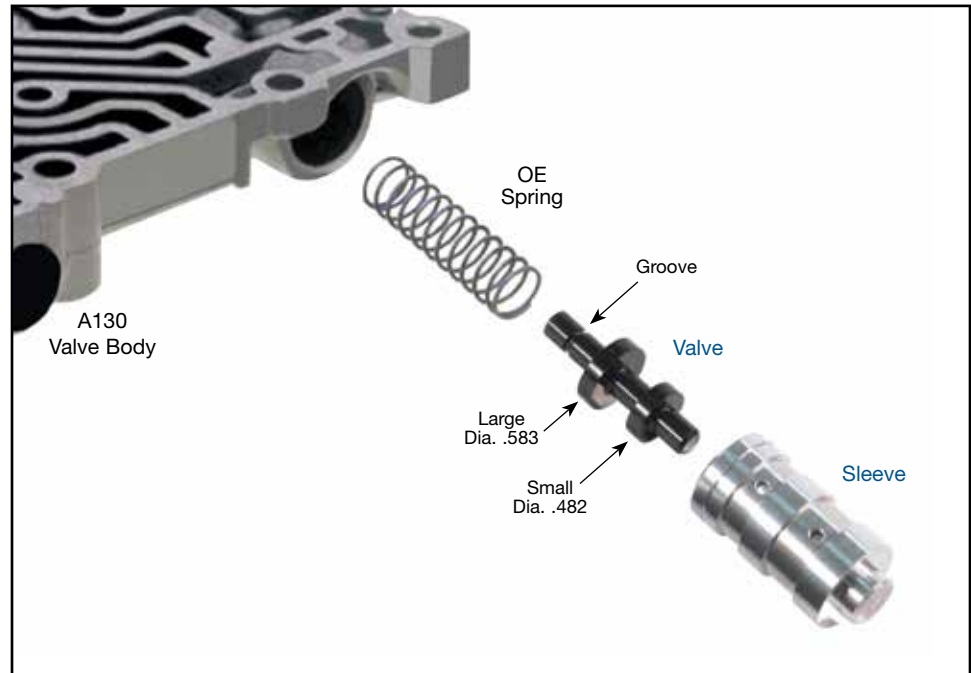

### 1. Disassembly

- Remove and discard OE boost sleeve and valve.
- Remove OE spring and save for reuse.
- Verify the OE boost valve and sleeve ratio by measuring the valve's large spool diameter and refer to chart.

### 2. Installation & Assembly

- Be certain all debris has been removed from the valve bore and valve body.
- Reinstall OE spring.
- Install Sonnax boost valve and sleeve.