

## Instructions


# **Saturn TAAT**

# **Pressure Regulator** Valve

## Part No. 95200-06

Pressure Regulator Valve

**NOTE:** Fits both Type 1 and Type 2 valve body designs.

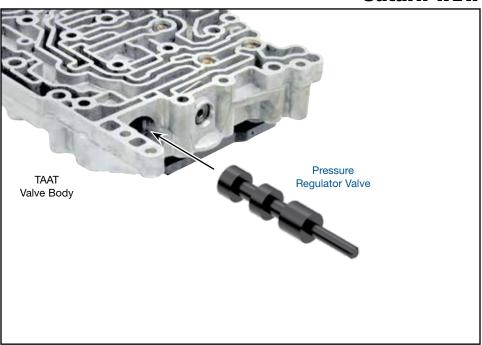

### 1. Disassembly

- a. Remove and save OE retainer, boost valve assembly, pressure regulator springs and spring hat.
- b. Remove and discard OE pressure regulator valve.



**NOTE:** If excess bore wear is discovered, Sonnax pressure regulator sleeve kit is available from your distributor. Sleeve can be used with Sonnax pressure regulator valve **95200-06**.

### 2. Installation & Assembly

- a. Be certain all debris has been removed from valve bore and body.
- b. Install Sonnax pressure regulator valve.
- c. Reinstall OE spring hat, springs and boost assembly.
- d. Secure with OE retainer.

#### 4. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

